
INSTALLATION AND OWNER'S MANUAL

M Thermal Mono ATW Heat Pump

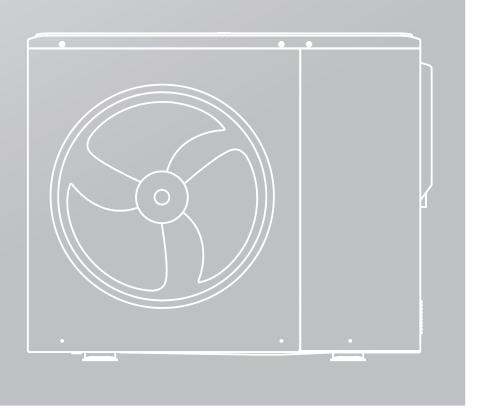




Original instructions.

Please read this manual carefully and keep it for future reference. All the pictures in this manual are for illustrations purpose only.


CONTENTS

1	SAFETY PRECAUTIONS	02
2	GENERAL INTRODUCTION	05
3	ACCESSORIES	06
	3.1 Accessories supplied with the unit 3.2 Accessories avaliable from supplier	
4	BEFORE INSTALLATION	07
5	IMPORTANT INFORMATION FOR THE REFRIGERANT	07
6	INSTALLATION SITE	08
	6.1 Selecting a location in cold climates 6.2 Selecting a location in direct sunlight	
7	INSTALLATION PRECAUTIONS	
	7.1 Dimensions 7.2 Installation requirements 7.3 Drain hole position 7.4 Servicing space requirements	····· 10 ····· 10 ····· 11
8	TYPICAL APPLICATIONS	13
	8.1 Application 1 8.2 Application 2 8.3 Cascade system 8.4 Buffer tank volume requirement	····· 15 ····· 18
9	OVERVIEW OF THE UNIT	20
	9.1 Main components 9.2 Control board 9.3 Water piping 9.4 Water 9.5 Filling water 9.6 Water piping insulation 9.7 Field wiring	21 26 29 30 30
10	START-UP AND CONFIGURATION	43
	10.1 Initial start-up at low outdoor ambient temperature 10.2 Pre-operation checks 10.3 Failure diagnosis at first installation 10.4 Installation Manual 10.5 Field settings	43 43 43

11 MENU STRUCTURE: OVERVIEW	46
11.1 Setting parameters	48
12 FINAL CHECKS AND TEST RUN	
12.1 Final checks	
12.2 Test run operation(manually)·····	52
13 MAINTENANCE AND SERVICE	53
14 TROUBLESHOOTING	54
14.1 General guidelines	54
14.2 General symptoms ·····	55
14.3 Error codes	57
15 TECHNICAL SPECIFICATIONS	59
15.1 General ·····	59
15.2 Electrical specifications	
46 INFORMATION OF DVICING	0.0
16 INFORMATION SERVICING	60
ANNEXA: Refrigerant cycle	63
ANNEX B: To install the E-heating	
tape at the drainage outlet (by client)	64

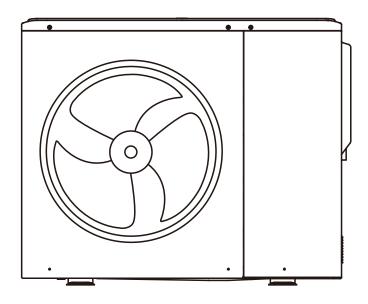

Please remove the hollow plate after installation.

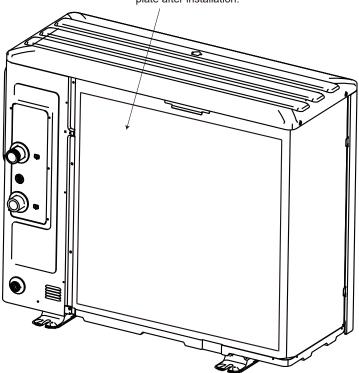

҈ NOTE

- Picture in this manual for reference only, please refer to the actual product.
- The backup heater can be customized outside the unit in accordance with demands, which contains 3 kW(1-phase),
 4.5 kW(1-phase),
 4.5 kW(3-phase)
 6 kW(3-phase)
 9 kW(3-phase)
 (Please refer to the INSTALLATION & OWNER'S MANUAL of the backup heater for details).
- The backup heater(optional) and heat pump are independently powered.

1 SAFETY PRECAUTIONS

The precautions listed here are divided into the following types. They are quite important, so be sure to follow them carefully. Meanings of DANGER, WARNING, CAUTION and NOTE symbols.

☐ INFORMATION

- Read these instructions carefully before installation. Keep this manual in a handy for future reference.
- Improper installation of equipment or accessories may result in electric shock, short-circuit, leakage, fire or other damage to the equipment. Be sure to only use accessories made by the supplier, which are specifically designed for the equipment and make sure to get installation done by a professional.
- All the activities described in this manual must be carried out by a licensed technician. Be sure to wear adequate
 personal protection equipment such as gloves and safety glasses while installing the unit or carrying out maintenance
 activities.
- Contact your dealer for any furthur assistance.



WARNING: Risk of fire flammable materials

MWARNING

Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.

⚠ DANGER

indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

⚠ WARNING

indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

A CAUTION

indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

(学 NOTE

indicates a non-hazard risk which, if not avoided, may result in decreased device performance, abnormal functions, or damage to the device or property.

Explanation of symbols displayed on the unit

	WARNING	this symbol shows that this appliance used a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
	CAUTION	this symbol shows that the manual should be read carefully.
	CAUTION	this symbol shows that only a competent service personnel should be handling this equipment with reference to the technical manual.
Ti.	CAUTION	this symbol shows that information is available such as the operating manual or installation manual.

⚠ DANGER

- · Before touching electric terminal parts, turn off power switch.
- · When service panels are removed, live parts can be easily touched by accident.
- · Never leave the unit unattended during installation or servicing when the service panel is removed.
- Do not touch water pipes during and immediately after operation as the pipes may be hot and could burn your hands. To avoid injury, give the piping time to return to normal temperature or be sure to wear protective gloves.
- Do not touch any switch with wet fingers. Touching a switch with wet fingers can cause electrical shock.
- Before touching electrical parts, turn off all applicable power to the unit.

№ WARNING

- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face danger of death by suffocation.
- Safely dispose of packing materials such as nails and other metal or wood parts that could cause injuries.
- Ask your dealer or qualified personnel to perform installation work in accordance with this manual. Do not install the
 unit yourself. Improper installation could result in water leakage, electric shocks or fire.
- Be sure to use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shocks, fire, or the unit falling from its mount.
- Install the unit on a foundation that can withstand its weight. Insufficient physical strength may cause the equipment to fall and possible injury.
- Perform specified installation work with full consideration of strong wind, hurricanes, or earthquakes. Improper installation work may result in accidents due to equipment falling.
- Make certain that all electrical work is carried out by qualified personnel according to the local laws and regulations and this manual using a separate circuit. Insufficient capacity of the power supply circuit or improper electrical construction may lead to electric shocks or fire.
- Be sure to install a ground fault circuit interrupter according to local laws and regulations. Failure to install a ground fault circuit interrupter may cause electric shocks and fire.
- Make sure all wiring is secure. Use the specified wires and ensure that terminal connections or wires are protected from water and other adverse external forces. Incomplete connection or affixing may cause a fire.
- When wiring the power supply, form the wires so that the front panel can be securely fastened. If the front panel is not in place there could be overheating of the terminals, electric shocks or fire.
- After completing the installation work, check to make sure that there is no refrigerant leakage.
- Never directly touch any leaking refrigerant as it could cause severe frostbite. Do not touch the refrigerant pipes
 during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of
 the refrigerant flowing through the refrigerant piping, compressor and other refrigerant cycle parts. Burns or frostbite
 are possible if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature
 or, if you must touch them, be sure to wear protective gloves.
- Do not touch the internal parts (pump, backup heater, etc.) during and immediately after operation. Touching the internal parts can cause burns. To avoid injury, give the internal parts time to return to normal temperature or, if you must touch them, be sure to wear protective gloves.

⚠ CAUTION

- Ground the unit.
- Grounding resistance should be according to local laws and regulations.
- Do not connect the ground wire to gas or water pipes, lightning conductors or telephone ground wires.
- Incomplete grounding may cause electric shocks.
 - Gas pipes: Fire or an explosion might occur if the gas leaks.
 - Water pipes: Hard vinyl tubes are not effective grounds.
 - Lightning conductors or telephone ground wires: Electrical threshold may rise abnormally if struck by a lightning bolt.
- Install the power wire at least 3 feet (1 meter) away from televisions or radios to prevent interference or noise. (Depending on the radio waves, a distance of 3 feet (1 meter) may not be sufficient to eliminate the noise.)
- Do not wash the unit. This may cause electric shocks or fire. The appliance must be installed in accordance with national wiring regulations. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- · Do not install the unit in the following places:
 - Where there is mist of mineral oil, oil spray or vapors. Plastic parts may deteriorate, and cause them to come loose or water to leak
 - Where corrosive gases (such as sulphurous acid gas) are produced. Where corrosion of copper pipes or soldered parts may cause refrigerant to leak.
 - Where there is machinery which emits electromagnetic waves. Electromagnetic waves can disturb the control system and cause equipment malfunction.
 - Where flammable gases may leak, where carbon fiber or ignitable dust is suspended in the air or where volatile flammables such as paint thinner or gasoline are handled. These types of gases might cause a fire.
 - Where the air contains high levels of salt such as near the ocean.
 - Where voltage fluctuates a lot, such as in factories.
 - In vehicles or vessels.
 - Where acidic or alkaline vapors are present.
- This appliance can be used by children 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or given instruction on using the unit in a safe manner and understand the hazards involved. Children should not play with the unit. Cleaning and user maintenance should not be done by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufaturer or its service agent or a similarly qualified person.
- DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste seperatelly for special treatment is necessary. Do not dispose of electrical appliances as municipal waste, use seperate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substance can leak into the groudwater and get into the food chain, damaging your health and well-being.
- The wiring must be performed by professional technicians in accordance with national wiring regulation and this circuit diagram. An all-pole disconnection device which has at least 3mm seperation distance in all pole and a residual current device (RCD) with the rating not exceeding 30mA shall be incorporated in the fixed wiring according to the national rule.
- Confirm the safety of the installation area (walls, floors, etc.) without hidden dangers such as water, electricity, and gas.Before wiring/pipes.
- Before installation, check whether the user's power supply meets the electrical installation requirements of unit (including reliable grounding, leakage, and wire diameter electrical load, etc.). If the electrical installation requirements of the product are not met, the installation of the product is prohibited until the product is rectified.
- When installing multiple air conditioners in a centralized manner, please confirm the load balance of the three-phase power supply, and multiple units are prevented from being assembled into the same phase of the three-phase power supply.
- Product installation should be fixed firmly. Take reinforcement measures, when necessary.

™NOTE

- About Fluorinated Gasses
 - This air-conditioning unit contains fluorinated gasses. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself. Compliance with national gas regulations shall be observed.
 - Installation, service, maintenance and repair of this unit must be performed by a certified technician.
 - Product uninstallation and recycling must be performed by a certified technician.
 - If the system has a leak-detection system installed, it must be checked for leaks at least every 12 months. When the unit is checked for leaks, proper record-keeping of all checks is strongly recommended.


2 GENERAL INTRODUCTION

- These units are used for both heating and cooling applications and domestic hot water tanks. They can be combined with fan coil units, floor heating applications, low temperature high efficiency radiators, domestic hot water tanks and solar kits, which are all field supplied.
- · A wired controller is supplied with the unit .
- The backup heater (Optional) can increase the heating capacity at pretty low outdoor temperature. And it also serves as backup service in case of malfunction of heat pump or avoiding freezing of outdoor water pipes.

③ NOTE

- Maximum length of communication wirings between the unit and the controller is 50 m.
- Power cords and communication wiring must be laid out separately, they can not be placed in the same conduit.
 Otherwise, it may lead to electromagnetic interference. Power cords and communication wirings should not come in contact with the refrigerant pipe so as to prevent the high temperature pipe from damaging wirings.
- Communication wirings must use shielded lines. Including indoor unit to outdoor unit PQE line, indoor unit to controller HA
 and HB line.

The relationship between capacity (Load) and ambient temperature

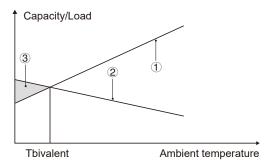


- 1 Heat pump capacity.
- 2 Required heating capacity (site dependent).
- 3 Additional heating capacity provided by backup heater.

Domestic hot water tank (field supply)

A domestic hot water tank(with or without booster heater) can be connected to the unit.

The requirement of the tank is different for different unit and material of heat exchanger.

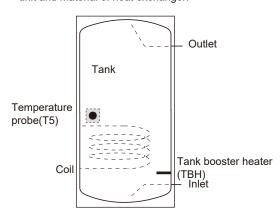

The booster heater should be installed below the temperature probe (T5).

The heat exchanger (coil) should be installed below the temperature probe.

The pipe length between the outdoor unit and tank should be less than 5 meters.

Model	5 kW	7~9 kW	12~16 kW	
Volume of tank/L Recommended		100~250	150~300	200~500
Heat exchange area/m² (Stainless steel coil)	Minimum	1.4	1.4	1.6
Heat exchange area/m² (Enamel coil)	Minimum	2.0	2.0	2.5

Room thermostat(field supplied)

Room thermostat can be connected to the unit(room thermostat should be kept away from heating source when selecting the installation place).

Solar kit for domestic hot water tank(field supplied)

An optional solar kit can be connected to the unit.


Operation range

Outlet water (Heati	+15 °C to +65 °C		
Outlet water (Coolin	+5 °C to +25 °C		
Domestic hot wate	+15 °C to +60 °C		
Ambient temperatu	-25 °C to +43 °C		
Water pressure	0.1 MPa to 0.3 MPa		
	5 kW	0.40 m ³ /h to 1.25 m ³ /h	
	7 kW	0.40 m ³ /h to 1.65 m ³ /h	
	9 kW	0.40 m ³ /h to 2.10 m ³ /h	
Water flow	12 kW	0.70 m ³ /h to 2.50 m ³ /h	
	14 kW	0.70 m ³ /h to 2.75 m ³ /h	
	16 kW	0.70 m ³ /h to 3.00 m ³ /h	


⚠ CAUTION

• The heat exchanger could be damaged by freezing water due to low water flow rate.

In cooling mode, the water flowing temperature (TW_out) range in different outdoor temperature(T4) is listed below:

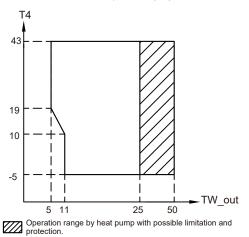

In heating mode, the water flowing temperature (T1) range in different outdoor temperature (T4) is listed below:

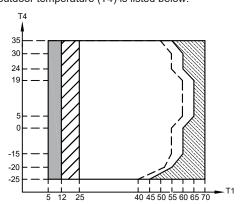


If IBH/AHS setting is valid,only IBH/AHS turns on;
If IBH/AHS setting is invalid,only heat pump turns on,
limitation and protection may occur during heat pump operation.

Operation range by heat pump with possible limitation and protection.

Heat pump turns off,only IBH/AHS turns on.(IBH can heat the water temperature up to 65 °C, AHS can heat the water temperature up to 70 °C)

Maximum inlet water temperature line for heat pump operation

In DHW mode, the water flowing temperature(T1) range in different outdoor temperature(T4) is listed below:

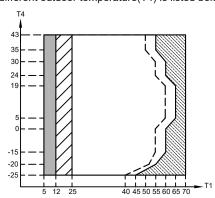

If IBH/AHS setting is valid,only IBH/AHS turns on;
If IBH/AHS setting is invalid,only heat pump turns on, limitation and protection may occur during heat pump operation.

Operation range by heat pump with possible limitation and protection.

Heat pump turns off,only IBH/AHS turns on.IBH can heat the water temperature up to 65 $^{\rm C}$, AHS can heat the water temperature up to 70 $^{\rm C}$

— Maximum inlet water temperature line for heat pump operation.

3 ACCESSORIES

3.1 Accessories supplied with the unit

Installation Fittings								
Installation	riungs							
Name	Shape	Quantity						
Installation and owner's manual(this book)		1						
Technical data manual		1						
Y-shape filter		1						
Wired controller		1						
Thermistor(10m) for Tbt (or Tw2 or Tsolar or T5)	0	1						
Drian hose		1						
Energy label		1						
Network matching wires	ئصا	1						
Protect Angle		1						

3.2 Accessories avaliable from supplier

Thermistor for buffer tank temp.(Tbt)	0
Connection wiring of Tbt sensor	
Thermistor for Zone 2 flow temp.(Tw2)	0
Thermistor for solar temp.(Tsolar)	\odot
Thermistor for hot water tank temp.(T5)	0)

Thermistor for Tbt,Tw2,Tsolar and T5 can be shared. If necessary, you can purchase other thermistors and connection wiring from the supplier.


4 BEFORE INSTALLATION

Before installation

Be sure to confirm the model name and the serial number of the unit.

Transport

Due to relatively large dimensions and heavy weight, the unit should only be hoised by lifting tools with slings, please refer to the following picture.

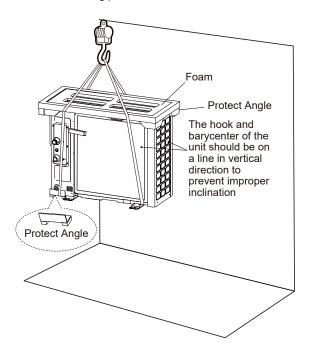


⚠ CAUTION


- To avoid injury, do not touch the air inlet or aluminum fins of the unit.
- Do not use the grips in the fan grills to avoid damage.
- The unit is top heavy! Prevent the unit from falling due to improper inclination during handling.

(unit:mm)

Model	Α	В	С
1 phase 5/7/9 kW	350	355	285
1 phase 12/14/16 kW	540	390	255
3 phase 12/14/16 kW	500	400	275

The position of barycenter for different units can be seen in the picture below.

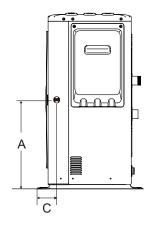

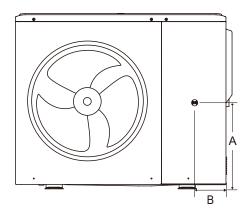

5 IMPORTANT INFORMATION FOR THE REFRIGERANT

This product has the fluorinated gas, which is forbidden to release to air.

Refrigerant type: R32; Volume of GWP: 675.

GWP=Global Warming Potential

Model	Factory charged refrigerant volume in the unit					
Wodei	Refrigerant/kg	Tonnes CO2 equivalent				
5 kW	1.25	0.85				
7 kW	1.25	0.85				
9 kW	1.25	0.85				
12 kW	1.80	1.22				
14 kW	1.80	1.22				
16 kW	1.80	1.22				

↑ CAUTION


- Frequency of Refrigerant Leakage Checks
 - For unit that contains fluorinated greenhouse gases in quantities of 5 tonnes of CO₂ equivalent or more,but of less than 50 tonnes of CO₂ equivalent,at least every 12 months, or where a leakage detection system is installed, at least every 24 months.
 - For unit that contains fluorinated greenhouse gases in quantities of 50 tonnes of CO₂ equivalent or more, but of less than 500 tonnes of CO₂ equivalentat least every six months, or where a leakage detection system is installed, at least every 12 months.
 - For unit that contains fluorinated greenhouse gases in quantities of 500 tonnes of CO₂ equivalent or more,at least every three months, or where a leakage detection system is installed,at least every six months.
- This air-conditioning unit is a hermetically sealed equipment that contains fluorinated greenhouse gases.
- Only certificated person is allowed to do installation, operation and maintenance.

6 INSTALLATION SITE

⚠ WARNING

- There is flammable refrigerant in the unit and it should be installed in a well-ventilated site. If the unit is installed inside, an additional refrigerant detection device and ventilation equipment must be added in accordance with the standard EN378. Be sure to adopt adequate measures to prevent the unit from being used as a shelter by small animals.
- Small animals making contact with electrical parts can cause malfunction, smoke or fire. Please instruct the
 customer to keep the area around the unit clean.
- Select an installation site where the following condtions are satisfied and one that meets with your customer's approval.
 - · Places that are well-ventilated.
 - · Places where the unit does not disturb neighbors.
 - · Safe places which can bear the unit's weight and vibration and where the unit can be installed at an even level.
 - · Places where there is no possibility of flammable gas or product leak.
 - · The equipment is not intended for use in a potentially explosive atmosphere.
 - · Places where servicing space can be well ensured.
 - · Places where the units' piping and wiring lengths come within the allowable ranges.
 - · Places where water leaking from the unit cannot cause damage to the location (e.g. in case of a blocked drain pipe).
 - · Places where rain can be avoided as much as possible.
 - · Do not install the unit in places often used as a work space. In case of construction work (e.g. grinding etc.) where a lot of dust is created, the unit must be covered.
 - · Do not place any object or equipment on top of the unit (top plate).
 - · Do not climb, sit or stand on top of the unit.
 - Be sure that sufficient precautions are taken in case of refrigerant leakage according to relevant local laws and regulations.
 - · Don't install the unit near the sea or where there is corrosion gas.
- When installing the unit in a place exposed to strong wind, pay special attention to the following.
 - Strong winds of 5 m/sec or more blowing against the unit's air outlet causes a short circuit (suction of discharge air), and this may have the following consequences:
 - · Deterioration of the operational capacity.
 - · Frequent frost acceleration in heating operation.
 - · Disruption of operation due to rise of high pressure.
 - · When a strong wind blows continuously on the front of the unit, the fan can start rotating very fast until it breaks.


In normal condition,refer to the figures below for installation of the unit:

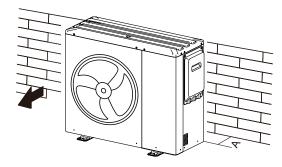

Unit	A(mm)
5~16 kW	≥300

In case of strong wind and the wind direction can be foreseen,refer to the figures below for installation of the unit(any one is OK):

Turn the air outlet side toward the building's wall, fence or screen.

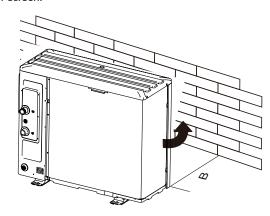

Unit	B(mm)
5~9 kW	≥1000
12~16 kW	≥1500

Make sure there is enough space to install the unit.

Set the outlet side at a right angle to the direction of the wind.



- Prepare a water drainage channel around the foundation, to drain waste water from around the unit.
- If water does not easily drain from the unit, mount the unit on a foundation of concrete blocks, etc. (The height of the foundation should be about 100 mm (3.93 in).
- If you install the unit on a frame, please install a waterproof plate (about 100 mm) on the underside of the unit to prevent water from coming in from the low side.
- When installing the unit in a place frequently exposed to snow, pay special attention to elevate the foundation as high as possible.

 If you install the unit on a building frame, please install a waterproof tray (field supply) (about 100mm, on the underside of the unit) in order to avoid drain water dripping. (See the picture in the right).




6.1 Selecting a location in cold climates

Refer to "Handling" in section "4 BEFORE INSTALLATION"

௸NOTE

When operating the unit in cold climates, be sure to follow the instructions described below.

- To prevent exposure to wind, install the unit with its suction side facing the wall.
- Never install the unit at a site where the suction side may be exposed directly to wind.
- To prevent exposure to wind, install a baffle plate on the air discharge side of the unit.
- In heavy snowfall areas, it is very important to select an installation site where the snow will not affect the unit. If lateral snowfall is possible, make sure that the heat exchanger coil is not affected by the snow (if necessary construct a lateral canopy).

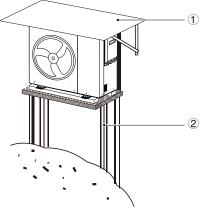

- ① Construct a large canopy.
- 2 Construct a pedestal.


Install the unit high enough off the ground to prevent it from being buried in snow. (The height of the pedestal must be larger than the largest thickness of the snow in the local history plus 10cm or more)

6.2 Selecting a location in direct sunlight

As the outdoor temperature is measured via the unit's ambient temperature sensor, make sure to install the unit in the shade or under a canopy to avoild direct sunlight, so that it is not influenced by the sun's heat, otherwise the unit may be protected.

7 INSTALLATION PRECAUTIONS

7.1 Dimensions

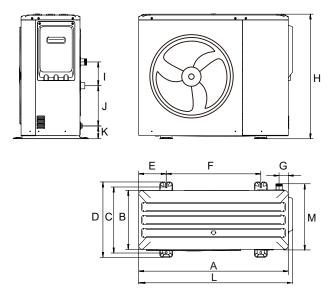



(unit:mm)

Model	Α	В	С	D	Е	F	G	Н	I	J	K	L	М
5-16 kW	1040	410	458	523	191	656	64	865	165	279	89	1068	450


7.2 Installation requirements

- Check the strength and level of the installation ground so that the unit may not cause any vibrations or noise during its
 operation.
- In accordance with the foundation drawing in the figure, fix the unit securely by means of foundation bolts. (Prepare four sets each of Φ10 Expansion bolts, nuts and washers which are readily available in the market.)
- Screw in the foundation bolts until their length is 20 mm from the foundation surface.

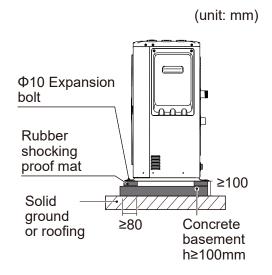

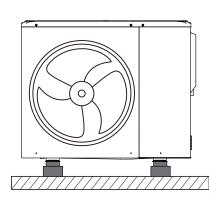

7.3 Drain hole position

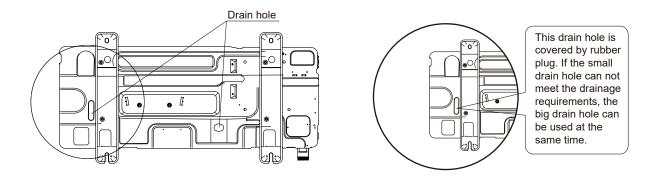

Make sure that condensation water can be evacuated properly. If necessary, use a drain pan(field supply) to prevent drain water from dripping.




It's necessary to install an electrical heating belt if water can't drain out in cold weather even the big drain hole has opened.

7.4 Servicing space requirements

7.4.1 In case of stacked installation

1) In case obstacles exist in front of the air outlet side.


2) In case obstacles exist in front of the air inlet side.

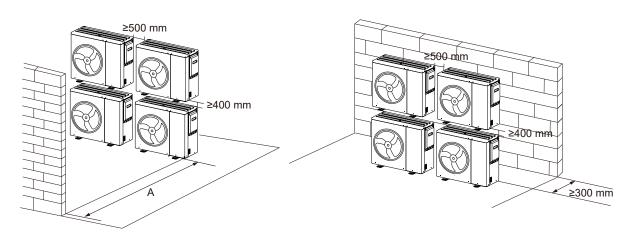

Unit	A(mm)
5~9 kW	≥1 000
12~16 kW	≥1 500

7.4.2 In case of multiple-row installation (for roof top use, etc.)


In case of installing multiple units in lateral connection per row.

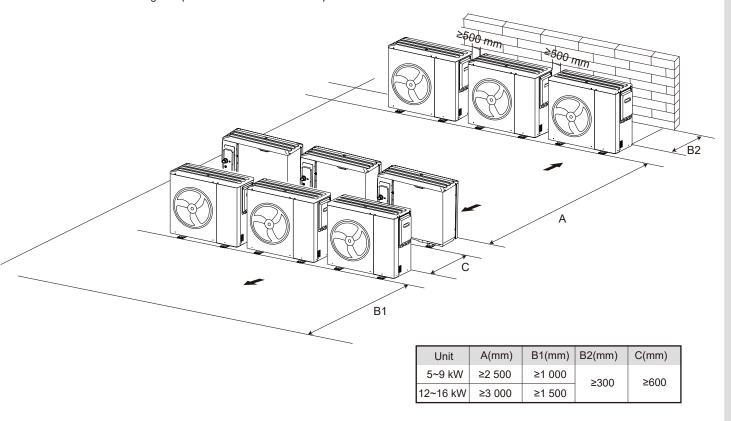

8 TYPICAL APPLICATIONS

The application examples given below are for illustration only.

8.1 Application 1

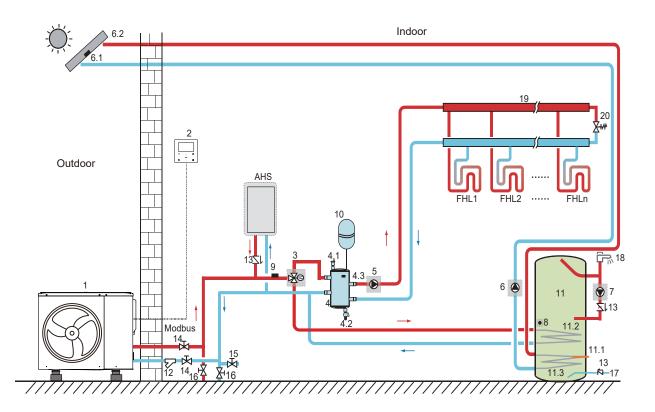

Code	Assembly unit	Code	Assembly unit
1	Main unit	11	Domestic hot water tank (Field supply)
2	User interface	11.1	TBH: Domestic hot water tank booster heater (Field supply)
3	SV1:3-way valve (Field supply)	11.2	Coil 1, heat exchanger for heat pump
4	Buffer tank (Field supply)	11.3	Coil 2, heat exchanger for Solar energy
4.1	Automatic air purge valve	12	Filter (Accessory)
4.2	Drainage valve	13	Check valve (Field supply)
4.3	Tbt: Buffer tank upper temperature sensor (Optional)	14	Shut-off valve (Field supply)
5	P_o: Outside circulation pump(Field supply)	15	Filling valve (Field supply)
6	P_s: Solar pump (Field supply)	16	Drainage valve (Field supply)
6.1	Tsolar: Solar temperature sensor (Optional)	17	Tap water inlet pipe (Field supply)
6.2	Solar panel (Field supply)	18	Hot water tap (Field supply)
7	P_d: DHW pipe pump (Field supply)	19	Collector/distributor (Field supply)
8	T5: Domestic water tank temperature sensor (Accessory)	20	Bypass valve (Field supply)
9	T1:Total water flow temperature sensor (Optional)	FHL 1n	Floor heating loop (Field supply)
10	Expansion vessel (Field supply)	AHS	Auxiliary heat source (Field supply)

· Space heating

The ON/OFF signal and operation mode and temperature setting are set on the user interface. P_o keeps running as long as the unit is ON for space heating, SV1 keeps OFF.

Domestic water heating

The ON/OFF signal and target tank water temperature (T5S) are set on the user interface. P_o stops running as long as the unit is ON for domestic water heating, SV1 keeps ON.

· AHS (auxiliary heat source) control

The AHS function is set on the user interface.(AHS function can be set valid or invalid in "OTHER HEATING SOURCE" of "FOR SERVICEMAN".)

- 1) When the AHS is set to be valid only for heating mode, AHS can be turned on in the following ways:
- a. Turn on the AHS via BACKHEATER function on the user interface;
- b. AHS will be turned on automatically if initial water temperature is too low or target water temperature is too high at low ambient temperature.
- P_o keeps running as long as the AHS is ON, SV1 keeps OFF.
- 2) When the AHS is set to be valid for heating mode and DHW mode. In heating mode, AHS control is same as part 1); In DHW mode, AHS will be turned on automatically when the initial domestic water temperature T5 is too low or the target domestic water temperature is too high at low ambient temperature. P_o stops running, SV1 keeps ON.
- 3) When the AHS is set valid, M1M2 can be set to be valid on the user interface. In heating mode, AHS will be turned on if MIM2 dry contact closes. This function is invalid in DHW mode.

TBH (tank booster heater) control

The TBH function is set on the user interface. (TBH function can be set valid or invalid in "OTHER HEATING SOURCE" of "FOR SERVICEMAN".)

- 1) When the TBH is set to be valid, TBH can be turned on via TANKHEATER function on the user interface; In DHW mode, TBH will be turned on automatically when the initial domestic water temperature T5 is too low or the target domestic water temperature is too high at low ambient temperature.
- 2) When the TBH is set to be valid, M1M2 can be set to be valid on the user interface. TBH will be turned on if MIM2 dry contact closes.

Solar energy control

- Hydraulic module recognizes solar energy signal by judging Tsolar or receiving SL1SL2 signal from user interface. The recognition method can be set via SOLAR INPUT on the user interface.
 - 1)When Tsolar is set to be valid, Solar energy turns ON when Tsolar is high enough, P_s starts running; Solar energy turns OFF when Tsolar is low, P_s stops running.
 - 2)When SL1SL2 control is set to be valid, Solar energy turns ON after receiving Solar kit signal from user interface, P s starts running; Without solar kit signal. Solar energy turns OFF, P s stops running.

⚠ CAUTION

The highest outlet water temperature may reach 70°C, please beware of burn.

③ NOTE

Make sure to install the (SV1) 3-way valve correctly. For more details, please refer to 9.7.6 "Connection for other components.


At extremely low ambient temperature, the domestic hot water is exclusively heated by TBH, which assures that heat pump can be used for space heating with full capacity.

Details on domestic hot water tank configuration for low outdoor temperatures (T4DHWMIN) can be found in "DHW MODE SETTING" of "FOR SERVICEMAN".

8.2 Application 2

ROOM THERMOSTAT control for space heating or cooling need to be set on the user interface. It can be set in three ways: MODE SET/ONE ZONE/DOUBLE ZONE. The unit can be connected to a low voltage room thermostat.

8.2.1 One zone control

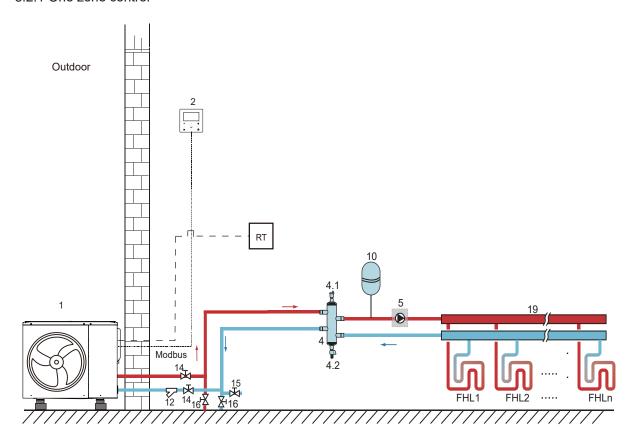

Code	Assembly unit	Code	Assembly unit
1	Main unit	12	Filter(Accessory)
2	User interface	14	Shut-off valve (Field supply)
4	Buffer tank (Field supply)	15	Filling valve (Field supply)
4.1	Automatic air purge valve	16	Drainage valve (Field supply)
4.2	Drainage valve	19	Collector/distributor (Field supply)
5	P_o: Outside circulation pump(Field supply)	RT	Low voltage room thermostat (Field supply)
10	Expansion vessel (Field supply)	FHL 1n	Floor heating loop (Field supply)


Space heating

One zone control: the unit ON/OFF is controlled by the room thermostat, operation mode and outlet water temperature are set on the user interface. System is ON when "HT" of the thermostat keep closing for 15s. When "HT" keep opening for 15s, system turns OFF.

The circulation pump operation

When the system is ON, which means "HT" of the thermostat close, P_o starts running; When the system is OFF, which means "HT" open, P_o stops running.

8.2.2 Mode set control

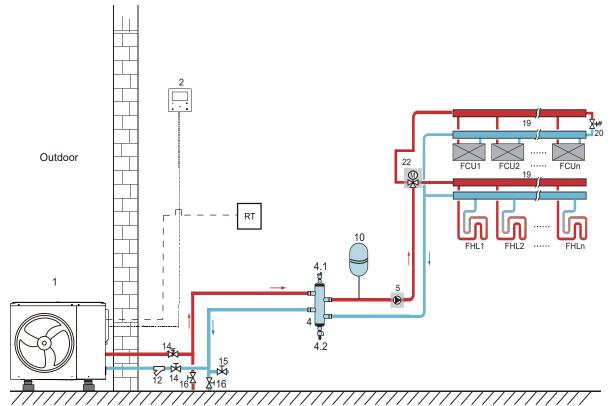

Code	Assembly unit	Code	Assembly unit
1	Main unit	15	Filling valve (Field supply)
2	User interface	16	Drainage valve (Field supply)
4	Buffer tank (Field supply)	19	Collector/distributor
4.1	Automatic air purge valve	20	Bypass valve (Field supply)
4.2	Drainage valve	22	SV2: 3-way valve (Field supply)
5	P_o: Outside circulation pump (Field supply)	RT	Low voltage room thermostat
10	Expansion vessel (Field supply)	FHL1n	Floor heating loop (Field supply)
12	Filter (Accessory)	FCU1n	Fan coil unit (Field supply)
14	Shut-off valve (Field supply)		

· Space heating


Operation mode and ON/OFF of the unit are set via the room thermostat, water temperature is set on the user interface.

- 1) When "CL" of the thermostat keep closing for 15s, the system will run according to the priority mode set on the user interface.
- 2) When "CL" of the thermostat keep opening for 15s and "HT" close, the system will run according to the non-priority mode set on the user interface.
- 3) When "HT" of the thermostat keep opening for 15s and "CL" open , the system will turn off.
- 4) When "CL" of the thermostat keep opening for 15s and "HT" open , the system will turn off.

• The circulation pump and valve operation

- When the system is in cooling mode, SV2 keeps OFF, P_o starts running.
 When the system is in heating mode, SV2 keeps ON, P_o starts running.

8.2.3 Double zone control

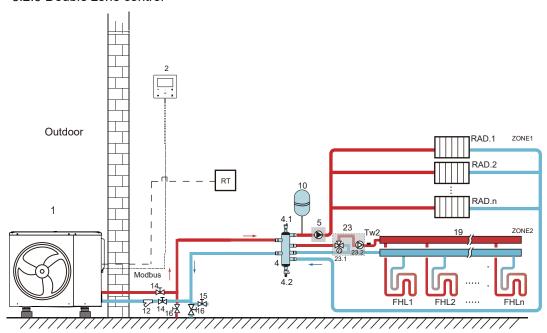

Code	Assembly unit	Code	Assembly unit
1	Main unit	16	Drainage valve (Field supply)
2	User interface	19	Collector/distributor (Field supply)
4	Buffer tank (Field supply)	23	Mixing station (Field supply)
4.1	Automatic air purge valve	23.1	SV3: Mixing valve (Field supply)
4.2	Drainage valve	23.2	P_c: zone 2 circulation pump (Field supply)
5	P_o: zone 1 circulation pump (Field supply)	RT	Low voltage room thermostat (Field supply)
10	Expansion vessel (Field supply)	Tw2	Zone 2 water flow temperature sensor (Optional)
12	Filter (Accessory)	FHL1n	Floor heating loop (Field supply)
14	Shut-off valve (Field supply)	RAD.1n	Radiator (Field supply)
15	Filling valve (Field supply)		

Space heating

Zone1 can operate in cooling mode or heating mode, while zone2 can only operate in heating mode; Operation mode and water temperature are set on the user interface, the unit ON/OFF is controlled by the room thermostat. While installing the system, only "HT" terminals need to be connected for the thermostat in zone1, only "CL" terminals need to be connected for the thermostat in zone2.

- 1) When "HT" keeps closing for 15s, zone1 turns ON. When "HT" keeps opening for 15s, zone1 turns OFF.
- 2) When "CL" keeps closing for 15s, zone2 turns ON. When "CL" keeps opening for 15s, zone2 turns OFF.

• The circulation pump and valve operation

When zone 1 is ON, P_o starts running; When zone 1 is OFF, P_o stops running; When zone 2 is ON, SV3 switches between ON and OFF according to the set TW2 , P_C keeps ON; When zone 2 is OFF, SV3 is OFF, P_c stops running.

The floor heating loops require a lower water temperature in heating mode compared to radiators or fan coil unit. To achieve these two set points, a mixing station is used to adapt the water temperature according to requirements of the floor heating loops. The radiators are directly connected to the unit water circuit and the floor heating loops are after the mixing station. The mixing station is controlled by the unit.


A CAUTION

- 1) Make sure to install the 3-way valve SV2/SV3 correctly. Please refer to 9.7.6 "Connection for other components".
- 2) Make sure the wirings of the room thermostat is correct. Please refer to 9.7.6 "Connection for other components".



Drainage valve must be installed at the lowest position of the piping system.

8.3 Cascade system

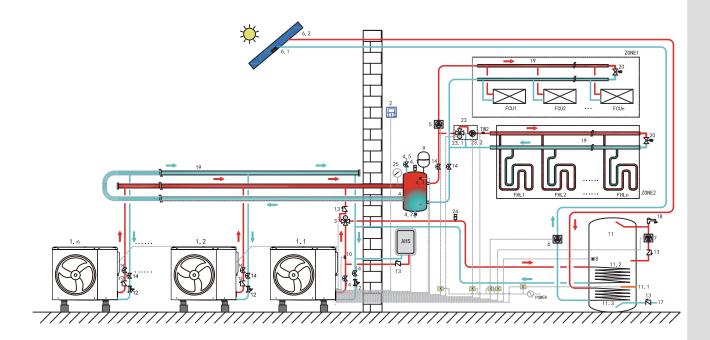

Code	Assembly unit	Code	Assembly unit	Code	Assembly unit
1.1	Master unit	5	P_O:Outside circulation pump (Field supply)	11.1	TBH: Domestic hot water tank booster heater
1.2n	Slave unit	6	P_S: Solar pump (Field supply)	11.2	Coin 1,heat exchanger for heat pump
2	User interface	6.1	Tsolar:Solar temperature sensor (Optional)	11.3	Coin 2,heat exchanger for solar energy
3	SV1:3-way valve (Field supply)	6.2	Solar panel (Field supply)	12	Filter (Accessory)
4	Buffer tank (Field supply)	7	P_D:DHW pipe pump (Field supply)	13	Check valve (Field supply)
4.1	Automatic air purge valve	8	T5:Domestic water tank temperature sensor (Accessory)	14	Shut-off valve (Field supply)
4.2	Drainage valve	9	Expansion vessel (Field supply)	17	Tap water inlet pipe (Field supply)
4.3	Tbt: Buffer tank upper temperature sensor (optional)	10	T1:Total water flow temperature sensor (Optional)	18	Hot water tap (Field supply)
4.5	Filling valve	11	Domestic hot water tank (Field supply)	19	Collector/distributor (Field supply)

20	Bypass valve (Field supply)	25	Water manometer (Field supply)	ZONE1	The space operates in cooling or heating mode
23	Mixing station (Field supply)	TW2	Zone2 water flow temperature sensor (Optional)	ZONE2	The space only operates in heating mode
23.1	SV3:Mixing valve (Field supply)	FCU1n	Fan coil unit(Field supply)	AHS	Auxiliary heating source(Field supply)
23.2	P_C:Zone2 circulation pump (Field supply)	FHL1n	Floor heating loop (Field supply)		
24	Automatic air purge valve (Field supply)	К	Contactor (Field supply)		

Domestic water heating

Only master unit can operate in DHW mode. T5S is set on the user interface. In DHW mode, SV1 keeps. ON. When master unit operated in DHW mode, slave units can operate in space cooling/heating mode.

Slave heating

All slave units can operate in space heating mode. The operation mode and setting temperature are set on the user interface. Due to changes of the outdoor tempearature and the required load indoors, multiple outdoor units may operate at different times

In cooling mode, SV3 and P C keep OFF, P O keeps ON;

In heating mode, when both ZONE 1 and ZONE 2 work, P_C and P_O keep ON, SV3 switches between ON and OFF according to the set TW2;

In heating mode, when only ZONE 1 works, P_O keep ON, SV3 and P_C keeps OFF;

In heating mode, when only ZONE 2 works, P_O keep OFF, P_C keeps ON, SV3 switches between ON and OFF according to the set TW2.

AHS(Auxiliary heat source) Control

The AHS function is set on the user interface.(AHS function can be set valid or invalid in "OTHER HEATING SOURCE" of "FOR SERVICEMAN".);AHS is only controlled by master unit. When master unit operates in DHW mode , AHS can only be used for producing domestic hot water; when master unit operates in heating mode, AHS can be used for heating mode.

- 1)When AHS is set valid only in heating mode, it will be turned on in following conditions:
- a.Turn on BACKUPHEATER function on user interface;
- b.Master unit operates in heating mode. When inlet water temperature is too low, or while ambient temperature is too low, the target leaving water temperature is too high, AHS will be turned on automatically.
- 2)When AHS is set valid in heating mode and DHW mode, it will be turned on in following conditions:

When master unit operates in heating mode, conditions of turning on AHS is same as 1); When master unit operates in DHW mode, if T5 is too low or when ambient temperature is too low, target T5 temperature is too high, AHS will be turned on automatically.

3)When AHS is valid, and the operation of AHS is controlled by M1M2. When M1M2 closes, AHS is turned on.

TBH (Tank booster heater) Control

The TBH function is set on the user interface. (TBH function can be set valid or invalid in "OTHER HEATING SOURCE" of "FOR SERVICEMAN".) TBH is only controlled by master unit. Please refer to 8.1 Application 1 for TBH control.

Solar energy Control

Solar energy is only controlled by master unit. Please refer to 8.1 Application 1 for solar energy control.

௸NOTE

- 1. Maximum 6 units can be cascaded the system. One of them is master unit, the others are slave units; Master unit and slave units are distinguished by whether connected to wired controller while powering on. The unit with wired controller is master unit, units without wired controller are slave units; Only master unit can operate in DHW mode. While installation, please check the cascade system diagram and determine the master unit; Before powering on, remove all wired controllers of salve units.

 2. SV1, SV2, SV3, P_O, P_C, P_S, T1, T5, TW2, Tbt, Tsolar, SL1SL2, AHS, TBH interface are only connected to corresponding terminals on main board of master unit.
- 3. The address code of the slave unit needs to be set on the hydraulic module PCB board DIP-switch (See electrically controlled wiring diagram on the unit)
- 4. It is suggested to use the reversed return water system in order to avoid hydraulic imbalance between each unit in a cascade system.

↑ CAUTION

- 1. In cascade system, Tbt sensor must be connected to master unit and set Tbt vaild on user interface, otherwise all slave units will not work.
- 2. If outside circulation pump need to be connected in series in system when the head of internal water pump is not enough, outside circulation pump is suggested to be installed after the balance tank.
- 3. Please ensure that the maximum interval of power-on time of all units doesn't exceed 2 mins, which may cause the slaves to fail to communicate normally.
- 4. Maximum 6 units can be cascaded in one system, all slave unit address codes cannot be the same and caonnot be 0#.
- 5. The outlet pipe of each unit must be installed with a check valve.


8.4 Buffer tank volume requirement

NO.	Model	Buffer tank(L)		
1	5~9 kW	≥ 25		
2	12~16 kW	≥40		
3	Cascade system	≥40*n		
n: The outdoor unit numbers				

9 OVERVIEW OF THE UNIT


9.1 Main components

9.1.1 Hydraulic module

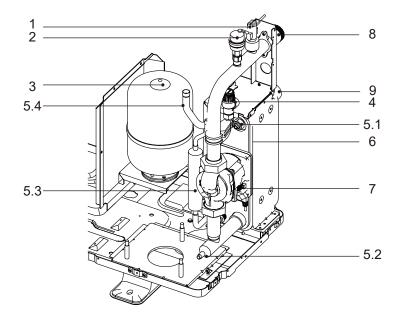


Code	Assembly unit	Explaination
1	Flow switch	Detects water flow rate to protect compressor and water pump in the event of insufficient water flow.
2	Automatic air purge valve	Remaining air in the water loop will be automatically removed from the water loop.
3	Expansion vessel	Balances water system pressure.
4	Pressure relief valve	Prevents excessive water pressure by opening at 3 bar and discharging water from the water loop.
5	Temperature sensor	Four temperature sensors determine the water and refrigerant temperature at various points in the water loop . 5.1 -TW-out; 5.2 -Tw-in; 5.3 -T2; 5.4 -T2B
6	Plate heat exchanger	Transfer heat from the refrigerant to the water.
7	Pump	Circulates water in the water loop.
8	Water inlet	1
9	Water outlet	l l

9.2 Control board

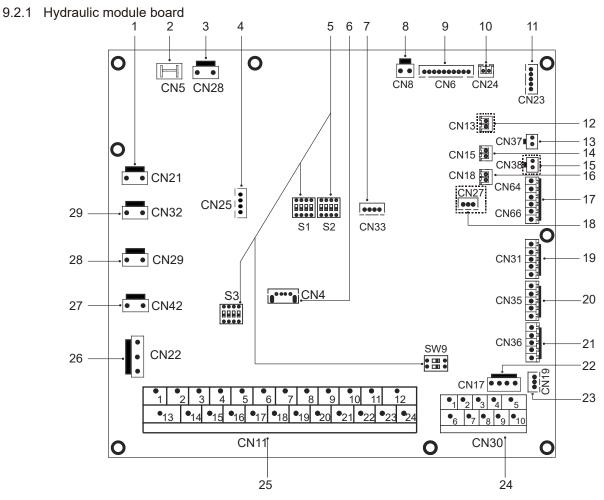


Order	Port	Code	Assembly unit	Orde	rPort	Code	Assembly unit
1	CN21	POWER	Port for power supply	18	CN27	HA/HB	Port for communication with the HOME BUS wired controller (Reserved)
2	CN5	GND	Port for ground			10V GND	Output port for 0-10V
3	CN28	PUMP	Port for variable speed pump power input	19	CN31	HT	Control port for room thermostat
						COM	Power port for room thermostat
4	CN25	DEBUG	Port for IC programming			CL	Control port for room thermostat
5	S1,S2,S3,SW9	1	Dip switch	20	CN35		Port for smart grid (grid signal)
6	CN4	USB	Port for USB programming		0.100	EVU	Port for smart grid (photovoltaic signal)
			1 0 0	21	CN36	M1 M2	Port for remote switch
7	CN33	/	Port for breathing light	21	CINOU	T1 T2	Port for thermostat transfer board
8	CN8	FS	Port for flow switch	22	CN17	PUMP_BP	Port for variable speed pump communication
		T2	Port for refrigerant liquid side temperature (heating mode)	23	CN19	PQ	Communicate port between indoor unit and outdoor unit
		T2B	Port for temperature sensor of refrigerant gas			3 4	Port for communication with the wired controller
9	CN6	TW in	side temperature Port for temperature sensor of inlet water	24	CN30	6 7	Communicate port between hydraulic module board and main control board
	0.10	1 * * _ 1	temperature of plate heat exchanger			9 10	Port for Internal machine Cascade
		TW_out	Port for temperature sensor of outlet water temperature of plate heat exchanger			12	Port for additional heat source
		T1	Port for temperature sensor of final outlet			3 4 17	Port for SV1(3-way valve)
		11	water temperature			5 6 18	Port for SV2(3-way valve)
10	CN24	Tbt	Port for temperature sensor of balance tank			7 8 19	Port for SV3(3-way valve)
				25	CN11	9 20	Port for zone 2 pump
11	CN23	RH	Port for humidity sensor (Reserved)				Port for outside circulation pump
12	CN13	T5	Port for domestic hot water tank temp. sensor				Port for solar energy pump
			Port for temperature sensor of water pressure			12 23 13 16	Port for DHW pipe pump Control port for tank booster heater
13	CN37	Pw	(Reserved)				Control port for talk booster fleater Control port for internal backup heater 1
						15 17	Control port for internal backup heater 2
14	CN15	Tw2	Port for outlet water for zone 2 temp. sensor			24 23	Output port for alarm/Defrost run
15	CN38	T52	Port for temperature sensor (Reserved)			IBH1	Control port for internal backup heater 1
				26	CN22	IBH2	Control port for internal backup heater 2
16	CN18	Tsolar	Port for solar panel temp sensor			ТВН	Control port for tank booster heater
		K1 K2	Input port (Reserved)	27	CN42	HEAT6	Port for anti-freeze electric heating tape(internal)
17	CN66	04.00	, , ,	28	CN29	HEAT5	Port for anti-freeze electric heating tape(internal)
		S1 S2	Input port for solar energy	29	CN32	AC OUT	Port for backup heater


9.2.2 Main control board

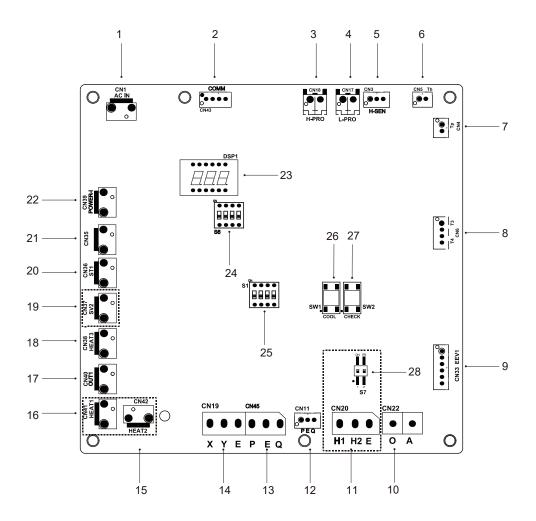

Code	Assembly unit	Code	Assembly unit
1	Power input port from Main control board (CN1)	15	Reserved(CN42)
2	Port for communication with Inverter module (CN43)	16	Reserved(CN41)
3	Port for high pressure switch (CN18)	17	OUT1 (CN40)
4	Port for low pressure switch (CN17)	18	Port for crankcase heating tape(CN38)
5	Port for high pressure sensor(CN3)	19	SV2 (CN37) (Reserved)
6	Port for TH temp.sensor(CN5)	20	Port for 4-way valve(CN36)
7	Port for TP temp.sensor(CN4)	21	Port for the heating tape of drainage outlet(CN35)
8	Port for T3,T4 temp.sensor(CN6)	22	Power output port to hydraulic module board (CN39)
9	Port for electrical expansion valve1(CN33)	23	Digital display(DSP1)
10	Port for communication with ammeter(CN22)	24	Dip switch S6
11	Port for communication with outdoor unit (CN20) (Reserved)	25	Dip switch S1
12	Port for communication with hydro-box control board (CN11)	26	Port for Forced cooling(SW1)
13	Same as ITEM 12(CN45 PQE)	27	Port for point check(SW2)
14	Port for communication with indoor monitor (CN19 XYE)	28	Dip switch S7(Reserved)

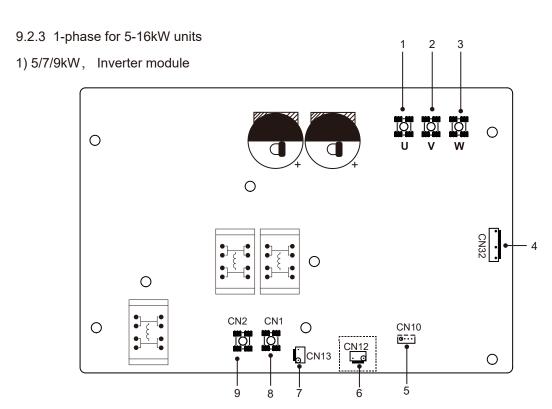


Code	Assembly unit	Code	Assembly unit
1	Compressor connection port U	6	Port for high pressure switch (CN12) (Reserved)
2	Compressor connection port V	7	Port for power supply(CN13)
3	Compressor connection port W	8	Input port L for rectifier bridge(CN1)
4	Port for fan(CN32)	9	Input port N for rectifier bridge(CN2)
5	Port for communication with main control board (CN10)		

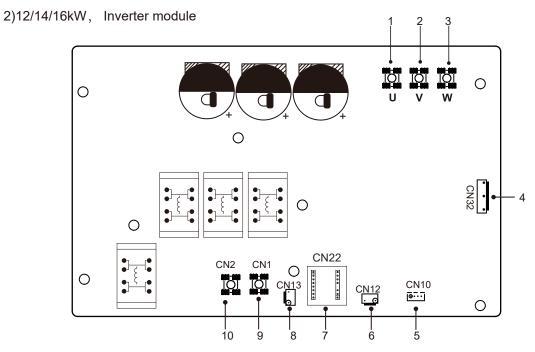


Code	Assembly unit	Code	Assembly unit
1	Compressor connection port U	6	Port for high pressure switch (CN12)
2	Compressor connection port V	7	PED board(CN22)
3	Compressor connection port W	8	Port for p-ower supply(CN13)
4	Port for fan(CN32)	9	Input port L for rectifier bridge(CN1)
5	Port for communication with main control board (CN10)	10	Input port N for rectifier bridge(CN2)

9.2.4 3-phase for 12/14/16 kW units

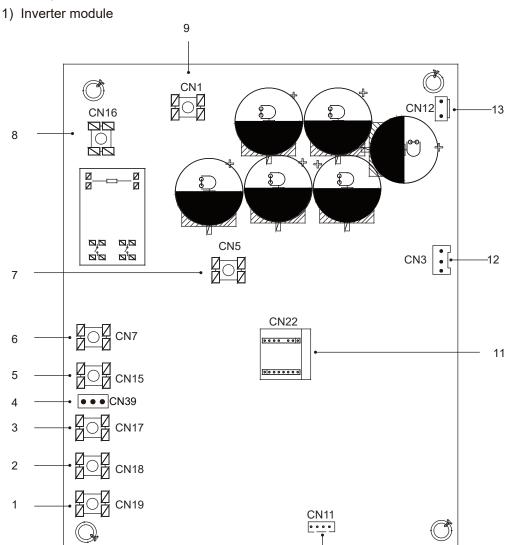

Code	Assembly unit	Code	Assembly unit
1	Compressor connection port W(CN19)	8	Power Input port L1(CN16)
2	Compressor connection port V(CN18)	9	Input port P_in for IPM module(CN1)
3	Compressor connection port U(CN17)	10	Port for communication with main control board (CN11)
4	Port for voltage detection (CN39)	11	PED board(CN22)
5	Power Input port L3(CN15)	12	Port for communication with DC FAN (CN3)
6	Power Input port L2(CN7)	13	Port for high pressure switch (CN12)
7	Input port P_out for IPM module(CN5)		

2) Filter board

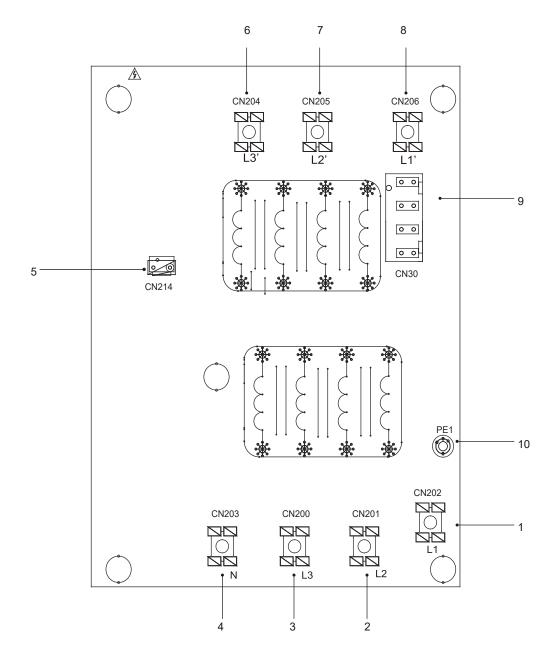

PCB C 3-phase 12/14/16kW

Code	Assembly unit	Code	Assembly unit
1	Power supply L1(CN202)	6	Power filtering output L3'(CN204)
2	Power supply L2(CN201)	7	Power filtering L2'(CN205)
3	Power supply L3(CN200)	8	Power filtering L1'(CN206)
4	Power supply N(CN203)	9	Port for voltage detection(CN30)
5	Power supply port for main control board(CN214)	10	Port for ground wire(PE1)

9.3 Water piping


All piping lengths and distances have been taken into consideration.

Requirements

The maximum allowed thermistor cable length is 20m. This is the maximum allowable distance between the domestic hot water tank and the unit (only for installations with a domestic hot water tank). The thermistor cable supplied with the domestic hot water tank is 10m in length. In order to optimize efficiency we recommend installing the 3-way valve and the domestic hot water tank as close as possible to the unit.

③ NOTE

If the installation is equipped with a domestic hot water tank (field supply), please refer to the domestic hot water tank Installation And Owner's Manual. If there is no glycol (anti-freeze) in the system or there is a power supply failure or pump failure, drain the system (as shown in the figure below).

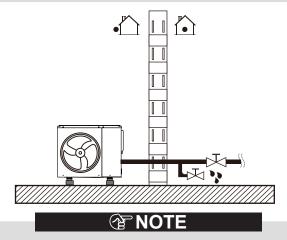


If water is not removed from the system in freezing weather when unit is not used, the frozen water may damage the water circle parts.

9.3.1 Check the water loop

The unit is equipped with a water inlet and water outlet for connection to a water loop. This circuit must be provided by a licensed technician and must comply with local laws and regulations.

The unit is only to be used in a closed water system. Application in an open water loop can lead to excessive corrosion of the water piping.

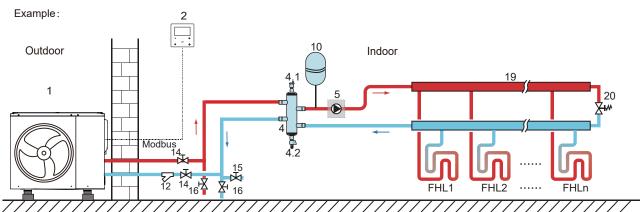

Code	Assembly unit	Code	Assembly unit		
1	Main unit	12	Filter (Accessory)		
2	User interface(accessory)	14	Shut-off valve (Field supply)		
4	Buffer tank (Field supply)	15	Filling valve (Field supply)		
4.1	Automatic air purge valve	16	Drainage valve (Field supply)		
4.2	Drainage valve	19	Collector/distributor (Field supply)		
5	P_o: Outside circulation pump(Field supply)	20	Bypass valve (field supply)		
10	Expansion vessel(field supply)	FHL	Floor heating loop (Field supply)		
	Expansion vessei(neid supply)	1n	Floor fleating loop (Fleid Supply)		

③ NOTE

· To avoid metal particles damage the unit, It is recommended to install a magnetic filter before the Y-type strainer,

Before continuing installation of the unit, check the following:

- The maximum water pressure ≤ 3 bar.
- The maximum water temperature ≤ 70°C according to safety device setting.
- · Always use materials that are compatible with the water used in the system and with the materials used in the unit.
- Ensure that components installed in the field piping can withstand the water pressure and temperature.
- Drain taps must be provided at all low points of the system to permit complete drainage of the circuit during maintenance.
- Air vents must be provided at all high points of the system. The vents should be located at points that are easily accessible
 for service. An automatic air purge valve is provided inside the unit. Check that this air purge valve is not tightened so that
 automatic release of air in the water loop is possible.

9.3.2 Water volume and sizing expansion vessels


The units are equipped with an expansion vessel of 8 L (effective volume is 5 L, use effective volume for calculation) that has a default pre-pressure of 1.5 bar. To assure proper operation of the unit, the pre-pressure of the expansion vessel might need to be adjusted.

1) Check that the total water volume in the installation, excluding the internal water volume of the unit, is at least 40 L.

☞ NOTE

- In most applications this minimum water volume will be satisfactory.
- In critical processes or in rooms with a high heat load though, extra water might be required.
- When circulation in each space heating loop is controlled by remotely controlled valves, it is important that this minimum water volume is kept even if all the valves are closed.
- 2) Expansion vessel volume must fit the total water system volume.
- 3) To size the expansion for the heating and cooling circuit.

The expansion vessel volume can follow the figure below:

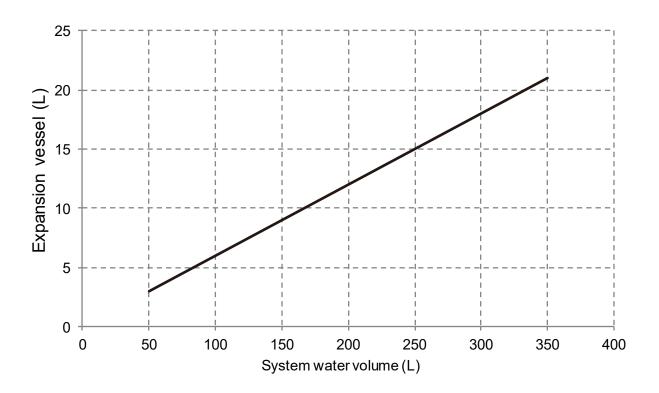

9.3.3 water loop connection


Water connections must be made correctly in accordance with labels on the outdoor unit, with respect to the water inlet and water outlet

A CAUTION

Be careful not to deform the unit's piping by using excessive force when connecting the piping. Deforming the piping can cause the unit to malfunction.

If air, moisture or dust gets in the water loop, problems may occur. Therefore, always take into account the following when connecting the water loop:

- Use clean pipes only.
- · Hold the pipe end downwards when removing burrs.
- Cover the pipe end when inserting it through a wall to prevent dust and dirt entering.
- Use a good thread sealant for sealing the connections. The sealing must be able to withstand the pressures and temperatures of the system.
- When using non-copper metallic piping, be sure to insulate two kind of materials from each other to prevent galvanic corrosion.
- For copper is a soft material, use appropriate tools for connecting the water loop. Inappropriate tools will cause damage to the pipes.



☞ NOTE

The unit is only to be used in a closed water system. Application in an open water loop can lead to excessive corrosion of the water piping:

- Never use Zn-coated parts in the water loop.
 Excessive corrosion of these parts may occur as copper piping is used in the unit's internal water loop.
- When using a 3-way valve in the water loop.
 Preferably choose a ball type 3-way valve to guarantee full separation between the domestic hot water and floor heating water loop.
- When using a 3-way valve or a 2-way valve in the water loop. The recommended maximum changeover time of the valve should be less than 60 seconds.


9.3.4 water loop anti-freeze protection

All internal hydronic parts are insulated to reduce heat loss. Insulation must also be added to the field piping.

In event of a power failure, the above features would not protect the unit from freezing.

The software contains special functions using the heat pump and backup heater (if optional and aviliable) to protect the entire system against freezing. When the temperature of the water flow in the system drops to a certain value, the unit will heat the water, either using the heat pump, the electric heating tap, or the backup heater. The anti-freeze function will turn off only when the temperature increases to a certain value.

Water may enter into the flow switch and cannot be drained out and may freeze when the temperature is low enough. The flow switch should be removed and dried, then can be installed in the unit.

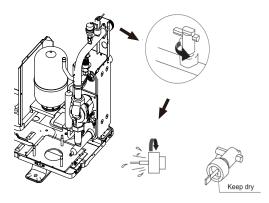

№ NOTE

Rotate the flow switch counterclockwise to remove it.

Dry the flow switch completely.

A CAUTION

When the unit is not running for a long time, make sure the unit is powered on all the time. If you want to cut off the power, the water in the system needs to be drained clean to avoid the unit and piping system be damaged by freezing. Also the power of the unit needs to be cut off after water in the system is drained off.

⚠ WARNING

Ethylene Glycol and Propylene Glycol are TOXIC

9.4 Water

③ NOTE

- Circulators function well exclusively with clean and high-quality tap water.
- Risk of material damage due to poor-quality water.
- The most frequent factors that can affect circulators and the system are oxygen, limescale, sludge, acidity level and other substances (including chlorides and minerals).
- In addition to the quality of water, installation also plays an important role. The heating system must be airtight. Choose materials that are not sensitive to oxygen diffusion (risk of corrosion...).

Characteristics of the water

- · Compliant with local regulations.
- Langelier Index (LI) between 0 and + 0.4.
- Within the limits indicated in the chart.

Water quality must be checked by qualified personnel.

Hardness

If the water is hard, install a system suitable to preserve the unit from harmful deposits and limestone formation.

☞ NOTE

If necessary, fit a water softener to reduce water hardness.

Cleanliness

Before connecting the water to the unit, clean the system thoroughly with specific products effective to remove residues or impurities that may affect functioning. Existing systems must be free from sludge and contaminants and protected against buildups.

New systems

In case of new installations, it is essential to wash the entire installation (with the circulator uninstalled) before commissioning the central installation. This removes residues of the installation process (welding, waste, joint products...) and preservatives (including mineral oil). The system must then be filled with clean high-quality tap water.

Existing systems

If a new boiler or heat pump is installed on an existing heating system, the system must be rinsed to avoid the presence of particles, sludge and waste. The system must be drained before installing the new unit. Dirt can be removed only with a suitable water flow. Each section must then be washed separately.

Particular attention must also be paid to "blind spots" where a lot of dirt can accumulate due to the reduced water flow. The system must then be filled with clean high-quality tap water. If, after rinsing, the quality of the water is still unsuitable, a few measures must be taken to avoid problems. An option to remove pollutants is to install a strainer. Various types of strainers are available. A mesh strainer is designed to catch large dirt particles. This strainer is usually placed in the part with the larger flow. A tissue strainer is designed to catch the finer particles.

Water component for corrosion limit on copper

PH	7.5-9.0	
Ryznar Stability Index (RSI)	< 6.0	
Electric conductivity	100-500	μS/cm
Total Hardness	4.5-8.5	dH
Max. quantity glycol	40	%
Sulfate ions (SO4)	< 50	ppm
Alkalinity (HCO ₃)	70-300	ppm
Chloride ions (CI-)	< 50	ppm
Phosphates (PO4)	< 2.0	ppm
NH3	< 0.5	ppm
Iron (Fe)	< 0.3	ppm
Manganese (Mn)	< 0.05	ppm
Sulfur (S)	None	
Ammonium ions (NH4)	None	
Silica (SiO2)	< 30	ppm
CO ₂	< 50	ppm
Oxygen content	< 0.1	ppm
Sand	< 10 mg/L, max diamete	0.1 to 0.7 mm er
Ferrite hydroxide Fe3O4 (black)		mg/L, 50 % of iameter < 10 μm
Iron oxide Fe2O3 (red)	Dose < 7.5 < 1 μm	mg/L, diameter


A CAUTION

If a potable water source is used as the equipment's water supply, a backsiphonage prevention device should be installed between the potable water source and the equipment.

9.5 Filling water

- Connect the water supply to the filling valve and open the valve.
- Make sure the automatic air purge valve is open.
- Fill with water pressure of approximately 2.0 bar. Remove air in the circuit as much as possible using the air purge valves. Air in the water loop could lead to malfunction of the backup electric heater.

Do not fasten the black plastic cover on the vent valve at the topside of the unit when the system is running. Open air purge valve, turn anticlockWise at least 2 full turns to release air from the system.

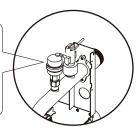

③ NOTE

During filling, it might not be possible to remove all air in the system. Remaining air will be removed through the automatic air purge valves during the first operating hours of the system. Topping up the water afterwards might be required.

- The water pressure will vary depending on the water temperature (higher pressure at higher water temperature). However, at all times water pressure should remain above 0.3 bar to avoid air entering the circuit.
- The unit might drain-off too much water through the pressure relief valve.
- Water quality should be complied with EN 98/83 EC Directives.
- Detailed water quality condition can be found in EN 98/83 EC Directives.

9.6 Water piping insulation

The complete water loop including all piping, water piping must be insulated to prevent condensation during cooling operation and reduction of the heating and cooling capacity as well as prevention of freezing of the outside water piping during winter. The insulation material should at least of B1 fire resistance rating and complies with all applicable legislation. The thickness of the sealing materials must be at least 13 mm with thermal conductivity 0.039 W/mK in order to prevent freezing on the outside water piping.

If the outdoor ambient temperature is higher than 30°C and the humidity is higher than RH 80%, then the thickness of the sealing materials should be at least 20 mm in order to avoid condensation on the surface of the seal.

9.7 Field wiring

⚠ WARNING

A main switch or other means of disconnection, having a contact separation in all poles, must be incorporated in the fixed wiring in accordance with relevant local laws and regulations. Switch off the power supply before making any connections. Use only copper wires. Never squeeze bundled cables and make sure they do not come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections. All field wiring and components must be installed by a licensed electrician and must comply with relevant local laws and regulations.

The field wiring must be carried out in accordance with the wiring diagram supplied with the unit and the instructions given below

Be sure to use a dedicated power supply. Never use a power supply shared by another appliance.

Be sure to establish a ground. Do not ground the unit to a utility pipe, surge protector, or telephone ground. Incomplete grounding may cause electrical shock.

Be sure to install a ground fault circuit interrupter (30 mA). Failure to do so may cause electrical shock.

Be sure to install the required fuses or circuit breakers.

9.7.1 Precautions on electrical wiring work

- Fix cables so that cables do not make contact with the pipes (especially on the high pressure side).
- Secure the electrical wiring with cable ties as shown in figure so that it does not come in contact with the piping, particularly on the high-pressure side.
- Make sure no external pressure is applied to the terminal connectors.
- When installing the ground fault circuit interrupter make sure that it is compatible with the inverter (resistant to high frequency electrical noise) to avoid unnecessary opening of the ground fault circuit interrupter.


愛NOTE

The ground fault circuit interrupter must be a high-speed type breaker of 30 mA (<0.1 s).

This unit is equipped with an inverter. Installing a phase advancing capacitor not only will reduce the power factor improvement
effect, but also may cause abnormal heating of the capacitor due to high-frequency waves. Never install a phase advancing
capacitor as it could lead to an accident.

9.7.2 Wiring overview

The illustration below gives an overview of the required field wiring between several parts of the installation.

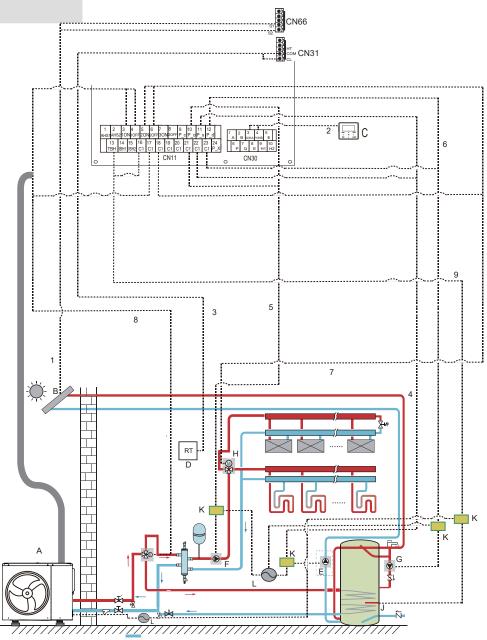

Code	Assembly unit	Code	Assembly unit		
Α	Main unit	G	P_d:DHW pump(field supply)		
В	Solar energy kit(field supply)	Н	SV2:3-way valve(field supply)		
С	User interface		SV1:3-way valve for domestic hot water tank(field supply)		
D	Low voltage room thermostat(field supply)	J	Booster heater		
E	P_s:Solar pump(field supply)	K	Contactor		
F	P_o:Outside circulation pump(field supply)	L	Power supply		

Item	Description	AC/DC	Required number of conductors	Maximum running current
1	Solar energy kit signal cable	AC	2	200mA
2	User interface cable	AC	2	200mA
3	Room thermostat cable	AC	2	200mA(a)
4	Solar pump control cable	AC	2	200mA(a)
5	Outside circulation pump control cable	AC	2	200mA(a)
6	DHW pump control cable	AC	2	200mA(a)
7	SV2: 3-way valve control cable	AC	3	200mA(a)
8	SV1: 3-way valve control cable	AC	3	200mA(a)
9	Booster heater control cable	AC	2	200mA(a)

⁽a) Minimum cable section AWG18 (0.75 mm 2). (b)The thermistor cable are delivered with the unit: if the current of the load is large, an AC contactor is needed.

③ NOTE

Please use H07RN-F for the power wire, all the cable are connect to high voltage except for thermistor cable and cable for user interface.

- Equipment must be grounded.
- All high-voltage external load, if it is metal or a grounded port, must be grounded.
- All external load current is needed less than 0.2A, if the single load current is greater than 0.2A, the load must be controlled through AC contactor.
- "AHS1" "AHS2" wiring terminal ports only provide the switch signal.
- Expansion valve E-Heating tape, Plate heat exchanger E-Heating tape and Flow switch E-Heating tape share a control port.

Field wiring guidelines

 Most field wiring on the unit is to be made on the terminal block inside the switch box. To gain access to the terminal block, remove the handle sheet metal.


⚠ WARNING

Switch off all power including the unit power supply and backup heater and domestic hot water tank power supply (if applicable) before removing the handle sheet metal.

- · Fix all cables using cable ties.
- A dedicated power circuit is required for the backup heater.
- Installations equipped with a domestic hot water tank (field supply) require a dedicated power circuit for the booster heater. Please refer to the domestic hot water tank Installation & Owner's Manual. Secure the wiring in the order shown below.
- Lay out the electrical wiring so that the front cover does not rise up when doing wiring work and attach the front cover securely.
- Follow the electric wiring diagram for electrical wiring works (the electric wiring diagrams are located on the rear side of handle sheet metal.
- Install the wires and fix the cover firmly so that the cover may be fit in properly.

9.7.3 Precautions on wiring of power supply

- Use a round crimp-style terminal for connection to the power supply terminal board. In case it cannot be used due to unavoidable reasons, be sure to observe the following instructions.
- Do not connect different gauge wires to the same power supply terminal. (Loose connections may cause overheating.)
- When connecting wires of the same gauge, connect them according to the figure below.







- Use the correct screwdriver to tighten the terminal screws. Small screwdrivers can damage the screw head and prevent appropriate tightening.
- Over-tightening the terminal screws can damage the screws.
- · Attach a ground fault circuit interrupter and fuse to the power supply line.
- In wiring, make certain that prescribed wires are used, carry out complete connections, and fix the wires so that outside force
 cannot affect the terminals.

9.7.4 Safety device requirement

- 1. Select the wire diameters(minimum valve) individually for each unit based on the table 9-1 and table 9-2, where the rated current in table 9-1 means MCA in table 9-2. In case the MCA exceeds 63A, the wire diameters should be selected according to the national wiring regulation.
- 2. Maximum allowable voltage range variation between phases is 2%.
- 3. Select circuit breaker that having a contact separation in all poles not less than 3 mm providing full disconnection, where MFA is used to select the current circuit breakers and residual current operation breakers.

Table 9-1

Rated current	Nominal cross-sectional area (mm²)					
of appliance: (A)	Flexible cords	Cable for fixed wiring				
≤3	0.5 and 0.75	1 and 2.5				
>3 and ≤6	0.75 and 1	1 and 2.5				
>6 and ≤10	1 and 1.5	1 and 2.5				
>10 and ≤16	1.5 and 2.5	1.5 and 4				
>16 and ≤25	2.5 and 4	2.5 and 6				
>25 and ≤32	4 and 6	4 and 10				
>32 and ≤50	6 and 10	6 and 16				
>50 and ≤63	10 and 16	10 and 25				

Table 9-2

1-phase 5-16kW standard and 3-phase 12-16kW standard

System	Outdoor Unit				Power Current			Compressor		OFM	
	Voltage (V)	Hz	Min. (V)	Max. (V)	MCA (A)	TOCA (A)	MFA (A)	MSC (A)	RLA (A)	kW	FLA (A)
5kW	220-240	50	198	264	13	18	20	-	10.50	0.17	1.50
7kW	220-240	50	198	264	14.5	18	20	-	10.50	0.17	1.50
9kW	220-240	50	198	264	16	18	20	-	10.50	0.17	1.50
12kW 1-PH	220-240	50	198	264	25	30	32	-	17.00	0.17	1.50
14kW 1-PH	220-240	50	198	264	26.5	30	32	-	17.00	0.17	1.50
16kW 1-PH	220-240	50	198	264	28	30	32	-	17.00	0.17	1.50
12kW 3-PH	380-415	50	342	456	9.5	14	16	-	16.00	0.17	0.70
14kW 3-PH	380-415	50	342	456	10.5	14	16	-	16.00	0.17	0.70
16kW 3-PH	380-415	50	342	456	11.5	14	16	-	16.00	0.17	0.70

☞NOTE

MCA: Minimum. Circuit Amps. (A) TOCA: Total Over-current Amps. (A) MFA: Max. Fuse Amps. (A) MSC: Max. Starting Amps. (A)

RLA: In nominal cooling or heating test condition, the input Amps of compressor where MAX. Hz


can operate Rated Load Amps. (A)


kW : Rated Motor Output FLA : Full Load Amps. (A)

9.7.5 Remove the switch box cover

1-phase 5-16 kW standard and 3-phase 12-16 kW standard

Unit	5 kW	7 kW	9 kW	12 kW	14 kW	16 kW	12 kW 3-PH	14 kW 3-PH	16 kW 3-PH
Maximum overcurrent protector(MOP)(A)	18	18	18	30	30	30	14	14	14
Wiring size(mm²)	4.0	4.0	4.0	6.0	6.0	6.0	2.5	2.5	2.5

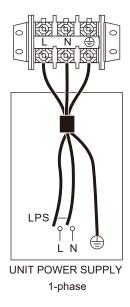

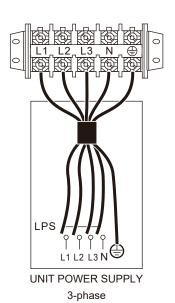



҈ NOTE

The ground fault circuit interrupter must be 1 high-speed type of 30mA(<0.1s). Please use 3-core shielded wire.

Stated values are maximum values (see electrical data for exact values).

Leakage protection switch must be installed to the power supply of the unit.

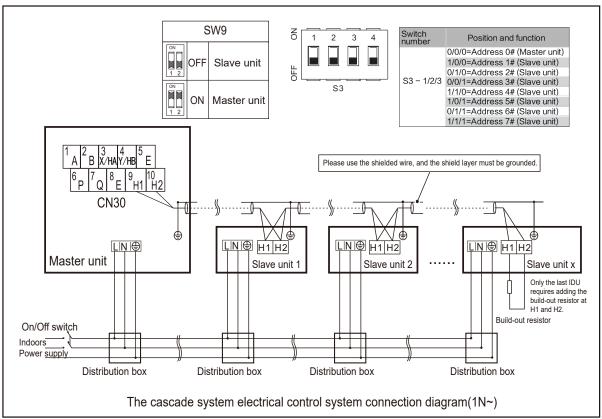

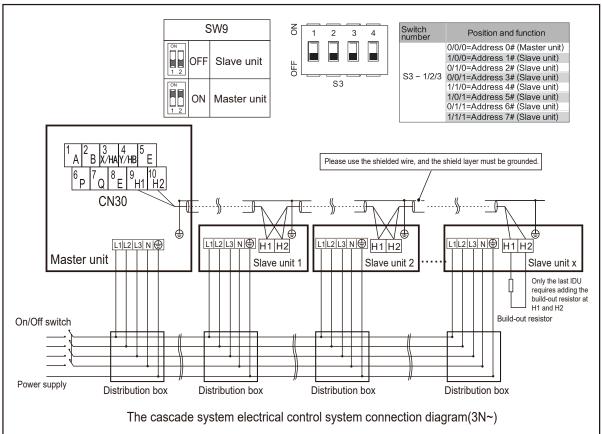

⚠ CAUTION

- 1. The cascade function of the system only supports 6 machines at most.
- 2. In order to ensure the success of automatic addressing, all machines must be connected to the same power supply and powered on uniformly.
- 3. Only the Master unit can connect the controller, and you must put the SW9 to "on" of the master unit, the slave unit cannot connect the controller .
- 4. Please use the shielded wire, and the shield layer must be grounded.

When connecting to the power supply terminal, use the circular wiring terminal with the insulation casing (see Figure 9.1).

Use power cord that conforms to the specifications and connect the power cord firmly. To prevent the cord from being pulled out by external force, make sure it is fixed securely.

If circular wiring terminal with the insulation casing cannot be used, please make sure that:

• Do not connect two power cords with different diameters to the same power supply terminal (may cause overheating of wires due to loose wiring) (See Figure 9.2).

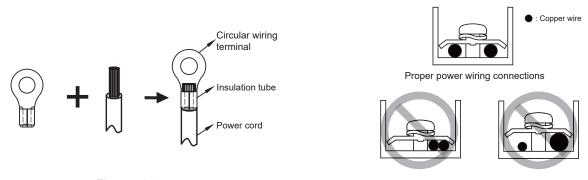


Figure 9.1

Figure 9.2

Power Cord Connection of cascade system

- Use a dedicated power supply for the indoor unit that is different from the power supply for the outdoor unit.
- · Use the same power supply, circuit breaker and leakage protective device for the indoor units connected to the same outdoor unit.

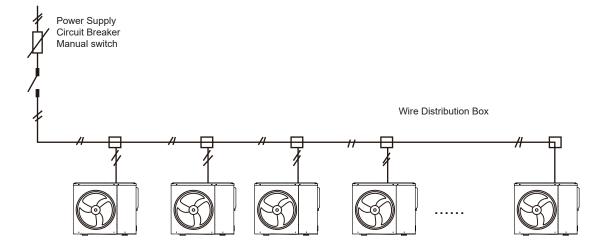


Figure 9.3

9.7.6 Connection for other components

unit 5-16 kW

See 9.2.1 for detailed port description.

Port provide the control signal to the load. Two kind of control signal port:


Type 1: Dry connector without voltage.

Type 2: Port provide the signal with 220V voltage.

If the current of load is <0.2A, load can connect to the port directly.

If the current of load is \geq =0.2A, the AC contactor is required to connected for the load.

For example:

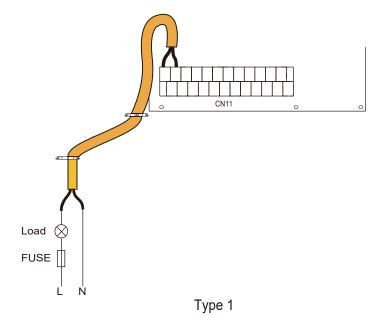

Power supply

7 5 3 1 A1

A2

8 6 4 2 Contactor


TCO

Load

Type 2

Control signal port of hydraulic module: The CN11contains terminals for 3-way valve, pump,booster heater, etc. The parts wiring is illustrated below:

1) For additional heat source control(AHS):

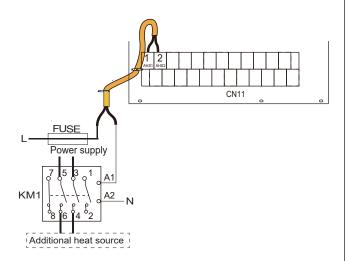



Voltage	220-240 V AC
Maximum running current(A)	0.2
Minimum wiring size(mm²)	0.75
Control port signal type	Type 1


⚠ WARNING

This part only applies to Basic. For Customized, cause there is an interval backup heater in the unit, the hydraulic module should not be connected to any additional heat source.

2) For 3-way valve SV1、SV2 and SV3:

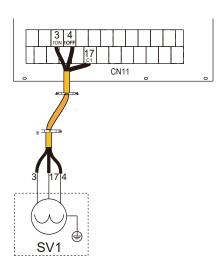

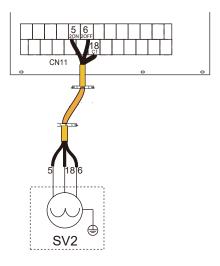

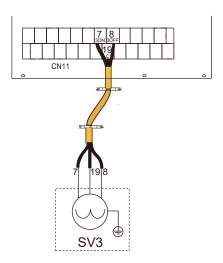


Voltage	220-240 V AC
Maximum running current(A)	0.2
Minimum wiring size(mm²)	0.75
Control port signal type	Type 2


a) Procedure


- Connect the cable to the appropriate terminals as shown in the picture.
- Fix the cable reliably.

3) For outside pump:

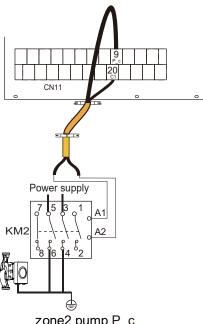


zone2 pump P_c

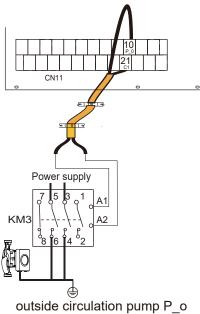

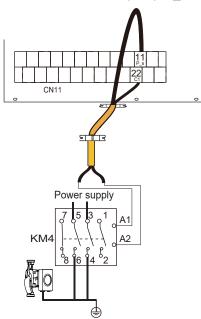

outside solar energy pump P_s

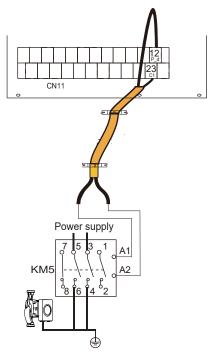


DHW pipe pump P_d

Voltage	220-240 V AC
Maximum running current(A)	0.2
Minimum wiring size(mm²)	0.75
Control port signal type	Type 2

a) Procedure

- Connect the cable to the appropriate terminals as shown in the picture.
- Fix the cable reliably.


4) For alarm or Defrost run(P_x):

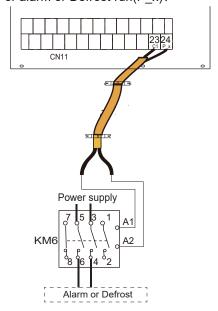


Voltage	220-240 V AC
Maximum running current(A)	0.2
Minimum wiring size(mm²)	0.75
Control port signal type	Type 2

a) Procedure

- Connect the cable to the appropriate terminals as shown in the picture.
- Fix the cable reliably.

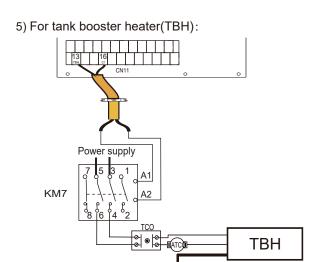

6) For internal backup heater(IBH)

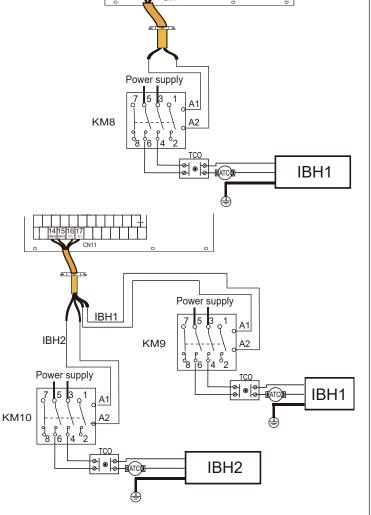

Voltage	220-240 V AC
Maximum running current(A)	0.2
Minimum wiring size(mm²)	0.75
Control port signal type	Type 2

☞ NOTE

- The unit only sends an ON/OFF signal to the heater.
- IBH2 cannot be wired independently.




Room thermostat (Low voltage) : "POWER IN" provide the $\,$ voltage to the RT.


҈ NOTE


The room thermostat must low voltage.

Room thermostat (Low voltage):

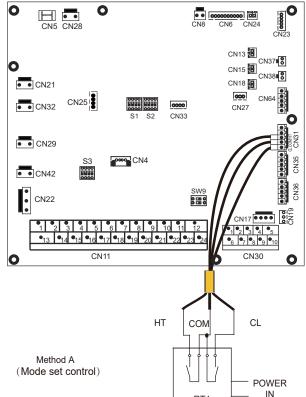

RT1

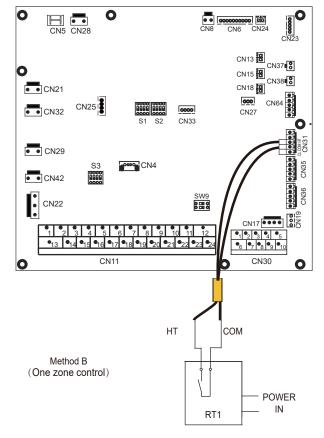

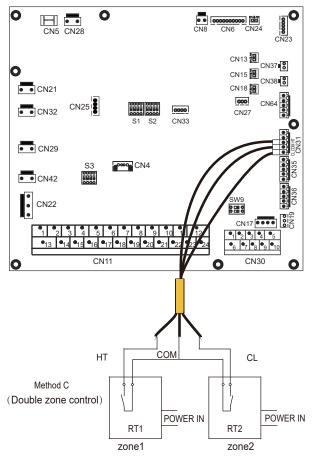

There are three methods for connecting the thermostat cable (as described in the picture above) and it depends on the application.

• Method A (Mode set control)

RT can control heating and cooling individually, like the controller for 4-pipe FCU. When the hydraulic module is connected with the external temperature controller, user interface FOR SERVICEMAN set ROOM THERMOSTAT to MODE SET:

A.1 When "CL" of the thermostat keep closing for 15s, the system will run according to the priority mode set on the user interface.

A.2 When "CL" of the thermostat keep opening for 15s and "HT" close , the system will run according to the non-priority mode set on the user interface.

A.3 When "HT" of the thermostat keep opening for 15s and "CL" open , the system will turn off.

A.4 When "CL" of the thermostat keep opening for 15s and "HT" open , the system will turn off.

The port closing voltage is 12VDC, the port disconnection voltage is 0VDC.

• Method B (One zone control)

RT provide the switch signal to unit. User interface FOR SERVICEMAN set ROOM THERMOSTAT to ONE ZONE:

B.1 When unit detect voltage is 12VDC between HT and COM, unit turns on.

B.2 When unit detect voltage is 0VDC between HT and COM, unit turns off.

Method C (Double zone control)

Hydraulic Module is connected with two room thermostat, while user interface FOR SERVICEMAN set ROOM THERMOSTAT to DOUBLE ZONE:

C.1 When unit detect voltage is 12VDC between HT and COM ,zone1 turn on.When unit detect voltage is 0VDC between HT and COM, zone1 turn off.

C.2 When unit detect voltage is 12VDC between CL and COM, zone2 turn on according to climate temp curve. When unit detect voltage is 0V between CL and COM, zone2 turn off.

C.3 When HT-COM and CL-COM are detected as 0VDC, unit turn off


C.4 when HT-COM and CL-COM are detected as 12VDC, both zone1 and zone2 turn on.

③ NOTE


- The wiring of the thermostat should correspond to the settings of the user interface.
- Power supply of machine and room thermostat must be connected to the same Neutral Line.
- When ROOM THERMOSTAT is not set to NON, the indoor temperature sensor Ta can't be set to valid.
- Zone 2 can only operate in heating mode, When cooling mode is set on user interface and zone1 is OFF, "CL" in zone2 closes, system still keeps 'OFF'. While installation, the wiring of thermostats for zone1 and zone2 must be correct.

a) Procedure

- Connect the cable to the appropriate terminals as shown in the picture.
- Fix the cable with cable ties to the cable tie mountings to ensure stress relief.
- 8) For solar energy input signal(low voltage):

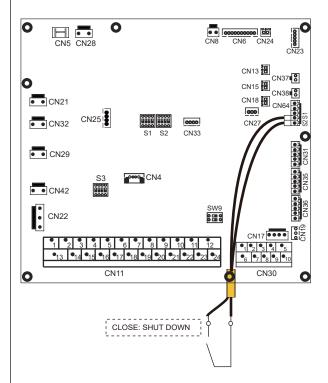


9) For remote shut down:

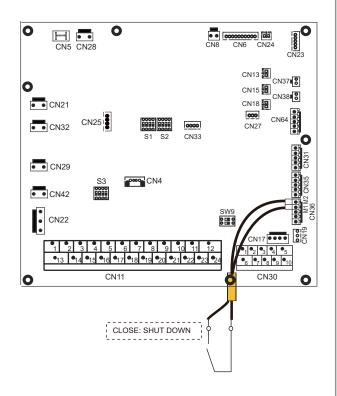

10) For smart grid:

The unit has smart grid function, there are two ports on PCB to connect SG signal and EVU signal as following:

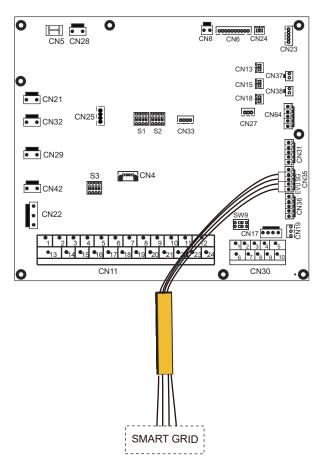

1) SG=ON, EVU=ON.

If DHW mode is set available:

- •The heat pump will operate in DHW mode firstly.
- •TBH is set available, If T5<69 €, TBH will be turned on forcibly (The heat pump and TBH can operate at the same time.); if T5 ≥70 €, TBH will be turned off.(DHW=Domestic Hot Water, T5S is the set water tank temperature.)
- •TBH is set unavailable and IBH is set available for DHW mode, as long as T5<59 $^{\circ}$,IBH will be turned on forcibly(The heat pump and TBH can operate at the same time.); if T5≥ 60 $^{\circ}$, IBH will be turned off.

2) SG=OFF, EVU=ON.

If DHW mode is set available and DHW mode is set ON:

- •The heat pump will operate in DHW mode firstly.
- •If TBH is set available and DHW mode is set ON, If T5< T5S-2, the TBH will be turned on (The heat pump and IBH can operate at the same time.); if T5≥T5S+3, the TBH will be turned off.
- •If TBH is set unavailable and IBH is set available for DHW mode ,If T5<T5S-dT5_ON, IBH will be turned on (The heat pump and IBH can operate at the same time.); if T5≥Min (T5S+3,60), the IBH will be turned off.
- 3) SG=OFF, EVU=OFF.

The unit will operate normally

4) SG=ON, EVU=OFF.

Heat pump,IBH, TBH will be turned off immediately.

10 START-UP AND CONFIGURATION

The unit should be configured by the installer to match the installation environment (outdoor climate, installed options, etc.) and user expertise.

⚠ CAUTION

It is important that all information in this chapter is read sequentially by the installer and that the system is configured as applicable.

10.1 Initial start-up at low outdoor ambient temperature

During initial start-up and when water temperature is low, it is important that the water is heated gradually. Fail to do so may result in concrete floors cracking due to rapid temperature change. Please contact the responsible cast concrete building contractor for further details.

To do so, the preheating function for floor can be used.(Please refer to "SPECIAL FUNCTION" in "FOR SERVICEMAN")

10.2 Pre-operation checks

Checks before initial start-up.

⚠ DANGER

Switch off the power supply before making any connections.

After the installation of the unit, check the following before switching on the circuit breaker:

- Field wiring: Make sure that the field wiring between the local supply panel and unit and valves (when applicable), unit and room thermostat (when applicable), unit and domestic hot water tank, and unit and backup heater kit have been connected according to the instructions described in the chapter 9.7 "Field wiring", according to the wiring diagrams and to local laws and regulations.
- Fuses, circuit breakers, or protection devices Check that the fuses or the locally installed protection devices are of the size and type specified in 15 "TECHNICAL SPECIFICATIONS".
 Make sure that no fuses or protection devices have been bypassed.
- Backup heater circuit breaker: Do not forget to turn on the backup heater circuit breaker in the switchbox (it depends on the backup heater type). Refer to the wiring diagram.
- Booster heater circuit breaker: Do not forget to turn on the booster heater circuit breaker (applies only to units with optional domestic hot water tank installed).
- Ground wiring: Make sure that the ground wires have been connected properly and that the ground terminals are tightened.
- Internal wiring: Visually check the switch box for loose connections or damaged electrical components.
- Mounting: Check that the unit is properly mounted, to avoid abnormal noises and vibrations when starting up the unit.
- Damaged equipment: Check the inside of the unit for damaged components or squeezed pipes.
- Refrigerant leak: Check the inside of the unit for refrigerant leakage. If there is a refrigerant leak, call your local dealer.
- Power supply voltage: Check the power supply voltage on the local supply panel. The voltage must correspond to the voltage on the identification label of the unit.
- Air purge valve: Make sure the air purge valve is open (at least 2 turns).
- Shut-off valves: Make sure that the shut-off valves are fully open.

10.3 Failure diagnosis at first installation

- If nothing is displayed on the user interface, it is necessary to check for any of the following abnormalities before diagnosing possible error codes.
 -Disconnection or wiring error (between power supply and unit and between unit and user interface).
 -The fuse on the PCB may be broken.
- If the user interface shows "E8" or "E0" as an error code, there is a possibility that there is air in the system, or the water level in the system is less than the required minimum.
- If the error code E2 is displayed on the user interface, check the wiring between the user interface and unit.
 More error code and failure causes can be found in 14.3 "Error codes".

10.4 Installation Manual

10.4.1 Safety precaution

- Read the safety precautions carefully before installing the unit
- Stated below are important safety issues that must be obeyed.
- Conform there is no abnormal phenomena during test operation after complete, then hand the manual to the user
- Meaning of marks:

⚠ WARNING

Means improper handling may lead to personal death or severe injury.

⚠ CAUTION

Means improper handling may lead to personal injury or property loss.

⚠ WARNING

Please entrust the distributor or professionals to install the unit.

Installation by other persons may lead to imperfect installation, electric shock or fire.

Strictly follow this manual.

Imporper installation may lead to electric shock or fire.

Reinstallation must be performed by professionals. improper installation may lead to electric shock or fire.

Do not disassemble your air conditioner at will. A random disassembly may cause abnormal operation or heating, which may result in fire.

⚠ CAUTION

The wired controller should be installed indoors and not be exposed to sunlight directly.

Do not install the unit in a place vulnerable to leakage of flammable gases.

Once flammable gases are leaked and left around the wired controller, fire may occure.

The wiring should adapt to the wired controller current. Otherwise, electric leakage or heating may occur and result in fire.

The specified cables shall be applied in the wiring. No external force may be applied to the terminal.

Otherwise, wire cut and heating may occur and result in fire.

⚠ CAUTION

Do not place the wired remote controller near the lamps, to avoid the remote signal of the controller to be disturbed. (refer to the right figure)



10.4.2 Other Precautions

10.4.2.1. Installation location

Do not install the unit in a place with much oil, steam, sulfide gas. Otherwise, the product may deform and fail.

10.4.2.2 Preparation before installation

1) Check whether the following assemblies are complete.


No.	Name	Qty.	Remarks
1	Wired Controller	1	
2	Cross round head wood mounting screw	3	For Mounting on the Wall
3	Cross round head mounting screw	2	For Mounting on the Electrical Switch Box
4	Installation and Owner's Manual	1	
5	Plastic bolt	2	This accessory is used when install the centralized control inside the electric cabinet
6	Plastic expansion pipe	3	For mounting on the Wall

10.4.2.3 Note for installation of wired controller:


- 1) This installation manual contains information about the procedure of installing Wired Remote Controller. Please refer to Indoor Unit Installation Manual for connection between Wired Remote Controller and Indoor Unit.
- 2) Circuit of Wired Remote Controller is low voltage circuit. Never connect it with a standard 220V/380V circuit or put it into a same Wiring Tube with the circuit.
- 3) The shielded cable must be connected stable to the ground, or transmission may fail.
- 4) Do not attempt to extend the shielded cable by cutting, if it is necessary, use Terminal Connection Block to connect.
- 5) After finishing connection, do not use Megger to have the insulation check for the signal wire.
- 6) Cut off the power supply when installing the wired controller.

10.4.3 Installation procedure and matching setting of wired controller

10.4.3.1 Structure size figure

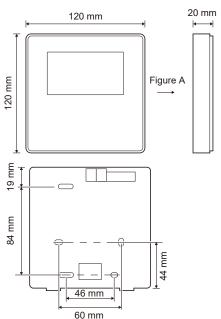



10.4.3.2 Wiring

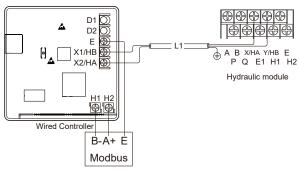



Input Voltage(HA/HB)	18 V DC
Wiring size	0.75 mm ²
Wiring type	2-core shielded twisted pair cable
Wiring length	L1<50 m

10.4.3.3 Back cover installation

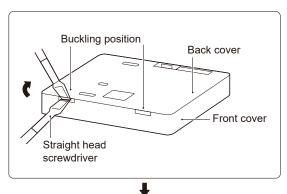


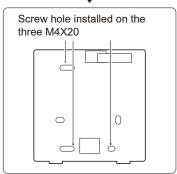


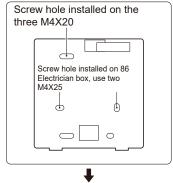


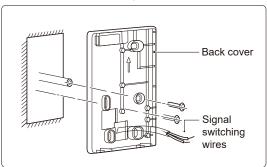

- 1) Use straight head screwdriver to insert in the buckling position in the bottom of wired controller, and spin the screwdriver to take down the back cover. (Pay attention to spinning direction, otherwise will damage the back cover!)
- 2) Use three M4X20 screws to directly install the back cover on the wall.
- 3) Use two M4X25 screws to install the back cover on the 86 electrician box, and use one M4X20 screws for fixing on the wall.
- 4) Adjust the length of two plastic screw bars in the accessory to be standard length from the electrical box screw bar to the wall. Make sure while installing the screw bar to the wall, making it as flat as the wall
- 5) Use cross head screws to fix the wired controller bottom cover in the wall through the screw bar. Make sure the wired controller bottom cover is on the same level after installation, and then install the wired controller back to the bottom cover.
- 6) Over fastening the screw will lead to deforma tion of back cover.

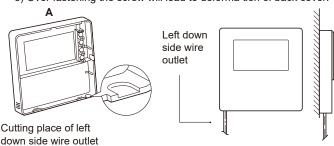

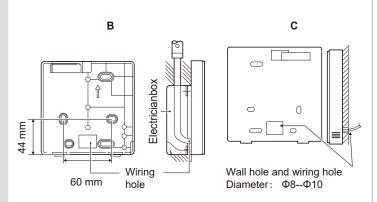





Avoid the water enter into the wired remote controller, use trap and putty to seal the connectors of wires during wiring installation.

10.4.4 Front cover installation

After adjusting the front cover and then buckle the front cover; avoid clamping the communication switching wire during installation.

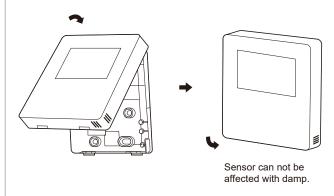

Correct install the back cover and firmly buckle the front cover and back cover, otherwise will make the front cover drop off.

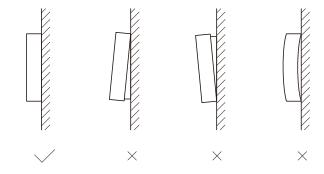

10.5 Field settings

The unit should be configured to match the installation environment (outdoor climate, installed options, etc.) and user demand. A number of field settings are available. These settings are accessible and programmable through "FOR SERVICEMAN" in user interface.

Powering on the unit

When the unit is powered on, "1%~99%" is displayed on the user interface. During this process the user interface cannot be operated.


Procedure

To change one or more field settings, please refer to "FOR SERVICEMAN" for details

③ NOTE

Temperature values displayed on the wired controller (user interface) are in °C.

11 MENU STRUCTURE: OVERVIEW

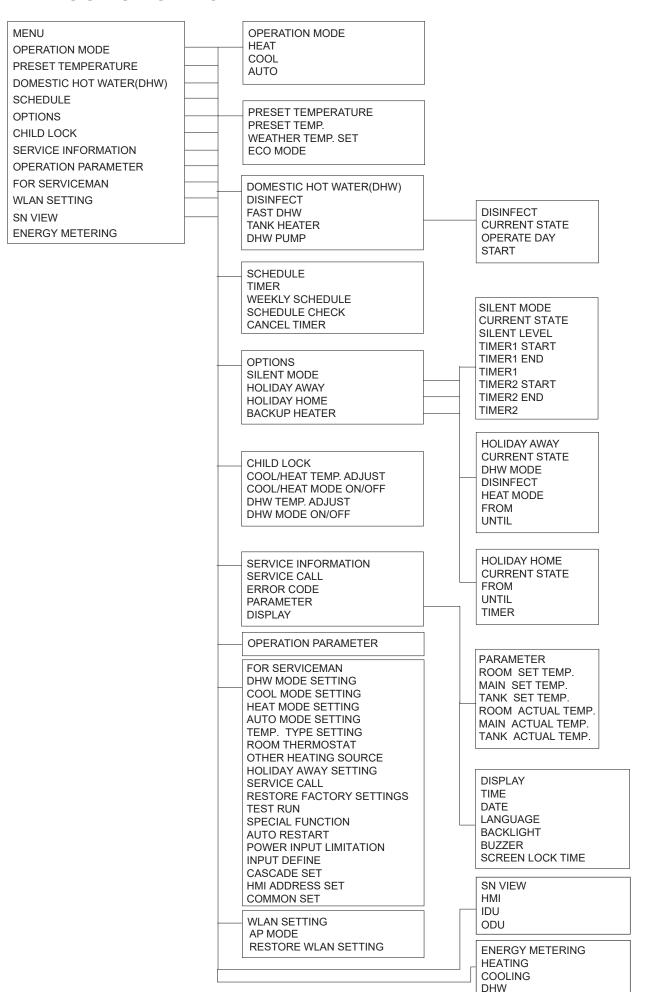

FOR SERVICEMAN 1 DHW MODE SETTING 2 COOL MODE SETTING 3 HEAT MODE SETTING 4 AUTO MODE SETTING 5 TEMP. TYPE SETTING **6 ROOM THERMOSTAT** 7 OTHER HEATING SOURECE 8 HOLIDAY AWAY SETTING 9 SERVICE CALL 10 RESTORE FACTORY SETTINGS 11TEST RUN 12 SPECIAL FUNCTION 13 AUTO RESTART 14 POWER INPUT LIMITATION 15 INPUT DEFINE 16 CASCADE SET 17 HMI ADDRESS SET 18 COMMON SET

1 DHW MODE SETTING 1.1 DHW MODE 1.2 DISINFECT 1.3 DHW PRIORITY 1.4 PUMP D 1.5 DHW PRIORITY TIME SET 1.6 dT5 ON 1.7 dT1S5 1.8 T4DHWMAX 1.9 T4DHWMIN 1.10 t INTERVAL DHW 1.11 T5S_DISINFECT 1.12 t_DI_HIGHTEMP 1.13 t_DI_MAX 1.14 t_DHWHP_RESTRICT 1.15 t_DHWHP_MAX 1.16 PUMP D TIMER 1.17 PUMP_D RUNNING TIME 1.18 PUMP_D DISINFECT

2 COOL MODE SETTING
2.1 COOL MODE
2.2 t_T4_FRESH_C
2.3 T4CMAX
2.4 T4CMIN
2.5 dT1SC
2.6 dTSC
2.7 t_INTERVAL_C
2.8 T1SetC1
2.9 T1SetC2
2.10 T4C1
2.11 T4C2
2.12 ZONE1 C-EMISSION
2.13 ZONE2 C-EMISSION

3 HEAT MODE SETTING

1.19 ACS FUNCTION

3.1 HEAT MODE
3.2 t_T4_FRESH_H
3.3 T4HMAX
3.4 T4HMIN
3.5 dT1SH
3.6 dTSH
3.7 t_INTERVAL_H
3.8 T1SetH1
3.9 T1SetH2
3.10 T4H1
3.11 T4H2
3.12 ZONE1 H-EMISSION
3.13 ZONE2 H-EMISSION
3.14 FORCE DEFROST

4 AUTO MODE SETTING 4.1 T4AUTOCMIN 4.2 T4AUTOHMAX

5 TEMP. TYPE SETTING 5.1 WATER FLOW TEMP. 5.2 ROOM TEMP. 5.3 DOUBLE ZONE 5.4 ENERGY METERING

6 ROOM THERMOSTAT 6.1 ROOM THERMOSTAT 6.2 MODE SET PRIORITY

7 OTHER HEATING SOURCE 7.1 IBH FUNCTION 7.2 IBH LOCATE 7.3 dT1 IBH ON 7.4 t IBH DELAY 7.5 T4 IBH ON 7.6 P IBH1 7.7 P IBH2 7.8 AHS FUNCTION 7.9 AHS PUMPI CONTROL 7.10 dT1_AHS_ON 7.11 t AHS DELAY 7.12 T4 AHS ON 7.13 EnSWITCHPDC 7.14 GAS_COST 7.15 ELE_COST 7.16 MAX SETHEATER 7.17 MIN_SETHEATER 7.18 MAX_SIGHEATER 7.19 MIN_SIGHEATER 7.20 TBH FUNCTION 7.21 dT5 TBH OFF 7.22 t TBH DELAY 7.23 T4_TBH_ON 7.24 P_TBH 7.25 SOLAR FUNCTION 7.26 SOLAR CONTROL 7.27 DELTASOL

8 HOLIDAY AWAY SETTING 8.1 T1S_H.A._H 8.2 T5S_H.A._DHW

9 SERVICE CALL PHONE NO. MOBILE NO.

10 RESTORE FACTORY SETTINGS

11 TEST RUN

12 SPECIAL FUNCTION

13 AUTO RESTART 13.1 COOL/HEAT MODE 13.2 DHW MODE

14 POWER INPUT LIMITATION 14.1 POWER INPUT LIMITATION

15 INPUT DEFINE 15.1 M1M2 15.2 SMART GRID 15.3 T1T2 15.4 Tbt 15.5 P_X PORT

16 CASCADE SET 16.1 PER_START 16.2 TIME_ADJUST 16.3 ADDRESS RESET

17 HMI ADDRESS SET 17.1 HMI SET 17.2 HMI ADDRESS FOR BMS 17.3 STOP BIT

18 COMMON SET
18.1 t_DELAY PUMP
18.2 t1_ANTILOCK PUMP
18.3 t2_ANTILOCK PUMP RUN
18.4 t1_ANTILOCK SV
18.5 t2_ANTILOCK SV RUN
18.6 Ta_adj.
18.7 F-PIPE LENGTH
18.8 PUMP_I SILENT OUTPUT

11.1 Setting parameters

The parameters related to this chapter are shown in the table below.

Order number	Code	State	Default	Unit
1.1	DHW MODE	Enable or disable the DHW mode:0=NON,1=YES	1	1
1.2	DISINFECT	Enable or disable the disinfect mode:0=NON,1=YES	1	1
1.3	DHW PRIORITY	Enable or disable the DHW priority mode:0=NON,1=YES	1	1
1.4	PUMP_D	Enable or disable the DHW pump mode:0=NON,1=YES	0	1
1.5	DHW PRIORITY TIME SET	Enable or disable the DHW priority time set:0=NON,1=YES	0	1
1.6	dT5_ON	The temperature difference for starting the heat pump	10	°C
1.7	dT1S5	The difference value between Twout and T5 in DHW mode	10	°C
1.8	T4DHWMAX	The maximum ambient temperature that the heat pump can operate at for domestic water heating	43	°C
1.9	T4DHWMIN	The minimum ambient temperature that the heat pump can operate for domestic water heating	-10	°C
1.10	t_INTERVAL_DHW	The start time interval of the compressor in DHW mode.	5	MIN
1.11	T5S_DISINFECT	The target temperature of water in the domestic hot water tank in the DISINFECT function.	65	°C
1.12	t_DI_HIGHTEMP	The time that the highest temperature of water in the domestic hot water tank in the DISINFECT function will last.	15	°C
1.13	t_DI_MAX	The maximum time that disinfection will last.	210	MIN
1.14	t_DHWHP_RESTRICT	The operation time for the space heating/cooling operation.	30	°C
1.15	t_DHWHP_MAX	The maximum running time of heat pump in DHW PRIORITY mode.	90	MIN
1.16	PUMP_D TIMER	Enable or disable the DHW pump run as timed and keeps running for PUMP RUNNING TIME:0=NON,1=YES	1	1
1.17	PUMP_D RUNNING TIME	The certain time that the DHW pump will keep running.	5	MIN
1.18	PUMP_D DISINFECT	Enable or disable the DHW pump operates when the unit is in disinfect mode and T5≥T5S_DI-2:0=NON,1=YES	1	1
1.19	ACS FUNCTION	Enable or disable the second water tank control T5_2: 0=NON,1=YES	0	1 .
2.1	COOL MODE	Enable or disable the cooling mode:0=NON,1=YES	1	1
2.2	t_T4_FRESH_C	The refresh time of climate related curves for cooling mode	0.5	hours
2.3	T4CMAX	The highest ambient operation temperature for cooling mode	52	°C
2.4	T4CMIN	The lowest ambient operating temperature for cooling mode	10	°C
2.5	dT1SC	The temperature difference between T1 and T1S(the set water temperature) for starting the heat pump	5	°C
2.6	dTSC	The temperature difference between actual room temperature Ta and the set room temperature Tas for starting the heat pump.	2	°C
2.7	t_INTERVAL_C	The start time interval of the compressor in cooling mode	5	min .
2.8	T1SetC1	The setting temperature 1 of climate related curves for cooling mode.	10	°C -
2.9	T1SetC2	The setting temperature 2 of climate related curves for cooling mode.	16	°C
2.10	T4C1	The ambient temperature 1 of climate related curves for cooling mode.	35	°C
2.11	T4C2	The ambient temperature 2 of climate related curves for cooling mode.	25	°C
2.12	ZONE1 C-EMISSION	The terminal type of zone 1 for cooling mode: 0=FCU(fan coil unit), 1=RAD.(radiator), 2=FHL(floor heating loop)	0	1
2.13	ZONE2 C-EMISSION	The terminal type of zone 2 for cooling mode: 0=FCU(fan coil unit), 1=RAD.(radiator), 2=FHL(floor heating loop)	0	1
3.1	HEAT MODE	Enable or disable the heating mode	1	1
3.2	t_T4_FRESH_H	The refresh time of climate related curves for heating mode	0.5	hours

Order number	Code	State	Default	Unit
3.3	T4HMAX	The maximum ambient operating temperature for heating mode	25	°C
3.4	T4HMIN	The minimum ambient operating temperature for heating mode	-15	°C
3.5	dT1SH	The temperature difference between T1 and T1S(the set water temperature) for starting the heat pump	5	°C
3.6	dTSH	The temperature difference between actual room temperature Ta and the set room temperature Tas for starting the heat pump	2	°C
3.7	t_INTERVAL_H	The start time interval of the compressor in heating mode	5	min
3.8	T1SetH1	The setting temperature 1 of climate related curves for heating mode	35	°C
3.9	T1SetH2	The setting temperature 2 of climate related curves for heating mode	28	°C
3.10	T4H1	The ambient temperature 1 of climate related curves for heating mode	-5	°C
3.11	T4H2	The ambient temperature 2 of climate related curves for heating mode	7	°C
3.12	ZONE1 H-EMISSION	The terminal type of zone 1 for heating mode: 0=FCU(fan coil unit), 1=RAD.(radiator), 2=FHL(floor heating loop)	1	1
3.13	ZONE2 H-EMISSION	The terminal type of zone 2 for heating mode: 0=FCU(fan coil unit), 1=RAD.(radiator), 2=FHL(floor heating loop)	2	1
3.14	FORCE DEFROST	Enable or disable the FORCE DEFROST function: 0=NON,1=YES	0	1
4.1	T4AUTOCMIN	The minimum operating ambient temperature for cooling in auto mode	25	°C
4.2	T4AUTOHMAX	The maximum operating ambient temperature for heating in auto mode	17	°C
5.1	WATER FLOW TEMP.	Enable or disable the WATER FLOW TEMP.:0=NON,1=YES	1	1
5.2	ROOM TEMP.	Enable or disable the ROOM TEMP::0=NON,1=YES	0	/
5.3	DOUBLE ZONE	Enable or disable the ROOM THERMOSTAT DOUBLE ZONE:0=NON,1=YES	0	1
5.4	HMI enable energy metering	Energy metering 0=NoN 1=YES	1	1
6.1	ROOM THERMOSTAT	Room thermostat type: 0=NON,1=MODESET,2=ONE ZONE 3=DOUBLE ZONE	0	1
6.2	MODE SET PRIORITY	Select the priority mode in ROOM THERMOSTAT: 0=HEAT,1=COOL	0	1
7.1	IBH FUNCTION	Select the mode that IBH (BACKUP HEATER) can run: 0=HEAT+DHW,1=HEAT	0 (DHW=valid) 1 (DHW=invalid)	1
7.2	IBH LOCATE	The installation location of IBH (PIPE LOOP=0)	0	1
7.3	dT1_IBH_ON	The temperature difference between T1S and T1 for starting the backup heater.	5	°C
7.4	t_IBH_DELAY	"The time that the compressor has run before the first backup heater turns on. Including the interval time between two backup heater operating, If IBH is in two-step control, "	30	min
7.5	T4_IBH_ON	The ambient temperature for starting the backup heater.	-5	°C
7.6	P_IBH1	Power input of IBH1	0	kW
7.7	P_IBH2	Power input of IBH2	0	kW
7.8	AHS FUNCTION	Enable or disable the AHS (AUXILIARY HEATING SOURCE) function: 0=NON,1=HEAT,2=HEAT+DHW	0	1
7.9	AHS_PUMPI CONTROL	Select the pump operating status when only AHS runs: 0=RUN,1=NOT RUN	0	1
7.10	dT1_AHS_ON	The temperature difference between T1S and T1B for starting the auxiliary heating source	5	°C
7.11	t_AHS_DELAY	The time that the compressor has run before starting the additional heating source	30	min
7.12	T4_AHS_ON	The ambient temperature for starting the additional heating source	-5	°C
7.13	EnSWITCHPDC	Enable or disable the function that heat pump and auxiliary heating source switch automatically based on running cost: 0=NON,1=YES	0	1

Order number	Code	State	Default	Unit
7.14	GAS_COST	Price of gas	0.85	€/m³
7.15	ELE_COST	Price of electricity	0.20	€/kWh
7.16	MAX_SETHEATER	Maximum setting temperature of additional heating source	80	°C
7.17	MIN_SETHEATER	Minimum setting temperature of additional heating source	30	°C
7.18	MAX_SIGHEATER	The voltage corresponding to the maximum setting temperature of additional heating source	10	V
7.19	MIN_SIGHEATER	The voltage corresponding to the minimum setting temperature of additional heating source	3	V
7.20	TBH FUNCTION	Enable or disable the TBH (TANK BOOSTER HEATER) function: 0=NON,1=YES	1	1
7.21	dT5_TBH_OFF	The temperature difference between T5 and T5S(The set water tank temperature) that turns the booster heater off.	5	°C
7.22	t_TBH_DELAY	The time that the compressor has run before starting the booster heater	30	min
7.23	T4_TBH_ON	The ambient temperature for starting the tank booster heater	5	°C
7.24	P_TBH	Power input of TBH	2	kW
7.25	SOLAR FUNCTION	Enable or disable the SOLAR function: 0=NON,1=ONLY SOLAR, 2=SOLAR+HP (HEAT PUMP)	0	1
7.26	SOLAR CONTROL	The solar pump (pump_s) control method : 0=Tsolar, 1=SL1SL2	0	1
7.27	DELTASOL	The deviation temperature that SOLAR turns on	10	°C
8.1	T1S_H.A_H	The target outlet water temperature for space heating in holiday away mode	25	°C
8.2	T5S_H.A_DHW	The target tank temperature for domestic hot water heating in holiday away mode	25	°C
12.1	PREHEATING FOR FLOOR-T1S	The setting temperature of outlet water during first preheating for floor	25	°C
12.1	t_FIRSTFH	Running time for first preheating of the floor	72	HOUR
	FLOOR DRYING UP	The function of drying up the floor	/	1
	t_DRYUP	Temp-up days for floor drying up	8	DAY
	t_HIGHPEAK	Days for floor drying up	5	DAY
	t_DRYD	Temp-down days for floor drying up	5	DAY
12.2	t_DRYPEAK	Outlet temperature of floor drying up	45	°C
	START TIME	The start time of floor drying up	Hour: the present time(not on the hour +1, on the hour +2) Minute:00	h/min
	START DATE	The start date of floor drying up	The present date	d/m/y
13.1	AUTO RESTART COOL/HEAT MODE	Enable or disable the auto restart cooling/heating mode. 0=NON,1=YES	1	1
13.2	AUTO RESTART DHW MODE	Enable or disable the auto restart DHW mode. 0=NON,1=YES	1	1
14.1	POWER INPUT LIMITATION	The type of power input limitation	0	1

Order number	Code	State	Default	Unit
15.1	M1M2	Define the function of the M1M2 switch: 0= REMOTE ON/OFF,1= TBH ON/OFF,2= AHS ON/OFF	0	/
15.2	SMART GRID	Enable or disable the SMART GRID: 0=NON,1=YES	0	1
15.3	T1T2	Control options of Port T1T2: 0=NON,1=RT/Ta_PCB	0	/
15.4	Tbt	Enable or disable the Tbt: 0=NON,1=YES	0	/
15.5	P_X PORT	Select the function of P_X PORT:0=DEFORST,1=ALARM	0	1
16.1	PER_START	Start-up percentage of multiple units	10	%
16.2	TIME_ADJUST	Adjustment time of loading and unloading units	5	min
16.3	ADDRESS RESET	Reset the address code of the unit	FF	1
17.1	HMI SET	Choose the HMI: 0=MASTER	0	/
17.2	HMI ADDRESS FOR BMS	Set the HMI address code for BMS	1	1
17.3	STOP BIT	Upper computer stop bit:1=STOP BIT1,2=STOP BIT2	1	/
18.1	t_DELAY PUMP	The time that the compressor has run before starting the pump.	2	min
18.2	t1_ANTILOCK PUMP	The pump anti-lock interval time	24	h
18.3	t2_ANTILOCK PUMP RUN	The pump anti-lock running time.	60	S
18.4	t1_ANTILOCK SV	The valve anti-lock interval time.	24	h
18.5	t2_ANTILOCK SV RUN	The valve anti-lock running time.	30	s
18.6	Ta_adj.	The corrected value of Ta inside wired controller.	-2	°C
18.7	F-PIPE LENGTH	Select the total length of the liquid pipe(F-PIPE LENGTH): 0=F-PIPE LENGTH<10m,1=F-PIPE LENGTH>=10m	0	/
18.8	PUMP_I SILENT OUTPUT	The pump_I max output limitation.	100	%

The setting range of the above parameters can be queried by scanning the QR code below. The QR code also includes: 1) FOR SERVICEMAN (The password to enter FOR SERVICEMAN is 234) 2) MODBUS MAPPING TABLE 3) CHANGE RECORD OF QR CODE



12 FINAL CHECKS AND TEST RUN

The installer is obliged to verify correct operation of unit after installation.

12.1 Final checks


Before switching on the unit, read following recommendations:

- When the installation and parameter setting are completed, cover all the sheet metal of the unit well.
- The unit should be maintained by professionals.


12.2 Test run operation(manually)

TEST RUN is used to check correct operation of the valves, air purge, circulation pump operation, cooling, heating and domestic water heating.

Go to ⊜ > FOR SERVICEMAN> 11.TEST RUN. Press ← . The password is 234. The following page will be displayed:

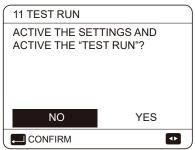

If YES is selected, the following pages will be displayed:

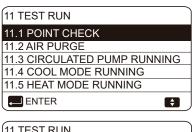


11 TEST RUN	
11.6 DHW MODE RUNNING	
ENTER	

If POINT CHECK is selected, the following pages will be displayed:

11 TEST RUN	1/3
SV2	OFF
SV3	OFF
PUMPI	OFF
PUMPO	OFF
PUMPC	OFF
ON/OFF	•

11 TEST RUN	2/3
IBH	OFF
AHS	OFF
SV1	OFF
PUMPD	OFF
PUMPS	OFF
ON/OFF	+




Press \blacktriangledown \blacktriangle to scroll to the components you want to check and press \circlearrowleft .

⚠ CAUTION


Before using POINT CHECK, make sure that the water system and the tank are filled with water, and air is expelled, otherwise the pump or backup heater (optional) may be broken.

If you select AIR PURGE, the following page will be displayed:

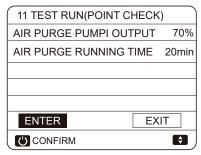


PUMPI will run according to the output and running time that has been set.

When CIRCULATED PUMP RUNNING is selected, the following page will be displayed:

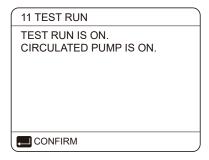


When circulation pump running is turned on, all running components will stop. 60 seconds later, the SV1 will be off, the SV2 will be on, 60 seconds later PUMPI will operate. 30s later, if the flow switch checked normal flow, PUMPI will operate for 3min, after the pump stops 60 seconds, the SV1 will close and the SV2 will be off. 60s later the both PUMPI and PUMPO will operate, 2 mins later, the flow switch will check the water flow. If the flow switch closes for 15s, PUMPI and PUMPO will operate until the next command is received.

When the COOL MODE RUNNING is selected, the following page will be displayed:

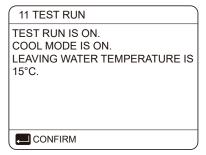


During COOL MODE test running, the default target outlet water temperature is 7°C. The unit will operate until the water temperature drops to a certain value or the next command is received

When the HEAT MODE RUNNING is selected, the following page will be displayed:

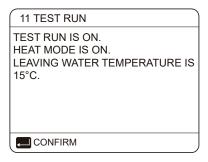


During HEAT MODE test running, the default target outlet water temperature is 35°C. The IBH (backup heater) will turn on after the compressor runs for 10 min. After the IBH runs for 3 minutes, the IBH will turn off, the heat pump will operate until the water temperature increase to a certain value or the next command is received.

When the DHW MODE RUNNING is selected, the following page will be displayed:

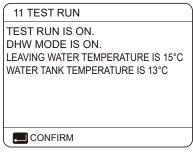


During DHW MODE test running, the default target temperature of the domestic water is 55°C. The TBH(tank boost heater) will turn on after the compressor runs for 10min. The TBH will turn off 3 minutes later, the heat pump will operate until the water temperature increase to a certain value or the next command is received.


During test run, all buttons except \div are invalid. If you want to turn off the test run, please press \div . For example ,when the unit is in air purge mode, after you press \div , the following page will be displayed:

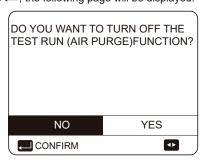

Press ◀ ► to scroll the cursor to YES and press —. The test run will turn off.

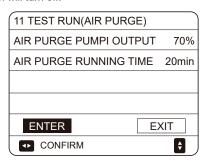

Press ▼ ▲ ◀► to adjust the parameters, click "ENTER" to send the setting parameters, the following pages will be displayed:

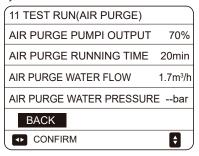

Press "BACK" to return to the AIR PURGE parameter setting screen

13 MAINTENANCE AND SERVICE

In order to ensure optimal availability of the unit, a number of checks and inspections on the unit and the field wiring have to be carried out at regular intervals.

This maintenance needs to be carried out by your local technician.

A DANGER

ELECTRIC SHOCK

- Before carrying out any maintenance or repairing activity, must switch off the power supply on the supply panel.
- Do not touch any live part for 10 minutes after the power supply is turned off.
- The crank heater of compressor may operate even in standby.
- Please note that some sections of the electric component box are hot.
- · Forbid touch any conductive parts.
- Forbid rinse the unit. It may cause electric shock or fire.

Forbid leave the unit unattended when service panel is removed.

The following checks must be performed at least once a year by qualified person.

- Water pressure
 - -Check the water pressure, if it is below 1 bar, fill water to the system.
- Water filter
 - -Clean the water filter.
- · Water pressure relief valve
 - -Check for correct operation of the pressure relief valve by turning the black knob on the valve counter-clockwise:

If you do not hear a clacking sound, contact your local dealer.

In case the water keeps running out of the unit, close both the water inlet and outlet shut-off valves first and then contact your local dealer.

- Pressure relief valve hose
 - -Check that the pressure relief valve hose is positioned appropriately to drain the water.
- Backup heater vessel insulation cover
 - -Check that the backup heater insulation cover is fastened tightly around the backup heater vessel.
- Domestic hot water tank pressure relief valve (field supply)
 - -Applies only to installations with a domestic hot water tank, check for correct operation of the pressure relief valve on the domestic hot water tank.
- · Domestic hot water tank booster heater
 - -Applies only to installations with a domestic hot water tank. It is advisable to remove lime buildup on the booster heater to extend its life span, especially in regions with hard water. To do so, drain the domestic hot water tank, remove the booster heater from the domestic hot water tank and immerse in a bucket (or similar) with lime-removing product for 24 hours.
- · Unit switch box
 - -Carry out a thorough visual inspection of the switch box and look for obvious defects such as loose connections or defective wiring.
 - -Check for correct operation of contactors with an ohm meter. All contacts of these contactors must be in open position.
- Use of glycol (Refer to 9.3.4 "water loop anti-freeze protection").

Document the glycol concentration and the pH-value in the system at least once a year.

- -A PH-value below 8.0 indicates that a significant portion of the inhibitor has been depleted and that more inhibitor needs to be added.
- -When the PH-value is below 7.0 then oxidation of the glycol occurred, the system should be drained and flushed thoroughly before severe damage occurs.
- · Make sure that the disposal of the glycol solution is done in accordance with relevant local laws and regulations.

14 TROUBLESHOOTING

This section provides useful information for diagnosing and correcting certain troubles which may occur in the unit.

This troubleshooting and related corrective actions may only be carried out by your local technician.

14.1 General guidelines

Before starting the troubleshooting procedure, carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

⚠ WARNING

When carrying out an inspection on the switch box of the unit, always make sure that the main switch of the unit is switched off.

When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. Under no circumstances can safety devices be bridged or changed to a valve other than the factory setting. If the cause of the problem cannot be found, call your local dealer.

If the pressure relief valve is not working correctly and is to be replaced, always reconnect the flexible hose attached to the pressure relief valve to avoid water dripping out of the unit!

™NOTE

For problems related to the optional solar kit for domestic water heating, refer to the troubleshooting in the Installation and owner's manual for that kit.

14.2 General symptoms

Symptom 1: The unit is turned on but the unit is not heating or cooling as expected

POSSIBLE CAUSES	CORRECTIVE ACTION
The temperature setting is not correct.	Check the parameters (T4HMAX, T4HMIN in heating mode; T4CMAX, T4CMIN in cooling mode; T4DHWMAX, T4DHWMIN in DHW mode). For the parameter setting range, please refer to 11.1 Setting parameters.
The water flow is too small.	 Check that all shut off valves of the water loop are in the right position. Check if the water filter is plugged. Make sure there is no air in the water system. Check the water pressure. The water pressure must be≥1.5 bar. Make sure that the expansion vessel is not broken.
The water volume in the installation is too small.	Make sure that the water volume in the installation is above the minimum required value. Please refer to 9.3.2 Water volume and sizing expansion vessels.

Symptom 2: The unit is turned on but the compressor is not starting

POSSIBLE CAUSES	CORRECTIVE ACTION
The unit maybe operate out of its operation range (the water temperature is too low).	In case of low water temperature, the system utilizes the backup heater to reach the minimum water temperature first (12°C). • Check that the backup heater power supply is correct. • Check that the backup heater thermal fuse is closed. • Check that the backup heater thermal protector is not activated. • Check that the backup heater contactors are not broken.

Symptom 3: Pump is making noise (cavitation)

POSSIBLE CAUSES	CORRECTIVE ACTION
There is air in the system.	Purge air.
Water pressure at pump inlet is too small.	 Check the water pressure. The water pressure must be ≥1.5 bar. Check that the expansion vessel is not broken. Check that the setting of the pre- pressure of the expansion vessel is correct.

Symptom 4: The water pressure relief valve opens

POSSIBLE CAUSES	CORRECTIVE ACTION
The expansion vessel is broken.	Replace the expansion vessel.
The filling water pressure in the installation is higher than 0.3MPa.	Make sure that the filling water pressure in the installation is about 0.10~0.20MPa.

Symptom 5: The water pressure relief valve leaks

POSSIBLE CAUSES	CORRECTIVE ACTION
Dirt is blocking the water pressure relief valve outlet.	 Check for correct operation of the pressure relief valve by turning the black knob on the valve counter clockwise: If you do not hear a clacking sound, contact your local dealer. In case the water keeps running out of the unit, close both the water inlet and outlet shut-off valves first and then contact your local dealer.

Symptom 6: Space heating capacity shortage at low outdoor temperatures

POSSIBLE CAUSES	CORRECTIVE ACTION
Backup heater operation is not activated.	 Check if that the "OTHER HEATING SOURCE/ IBH FUNCTION" is enabled. Check whether or not the thermal protector of the backup heater has been activated. Check if booster heater is running, the backup heater and booster heater can't operate simultaneously.
Too much heat pump capacity is used for heating domestic hot water (applies only to installations with a domestic hot water tank).	Check that the "t_DHWHP_MAX" and "t_DHWHP_RESTRICT" are configured appropriately: • Make sure that the "DHW PRIORITY" in the user interface is disabled. • Enable the "T4_TBH_ON" in the user interface/FOR SERVICEMAN to activate the booster heater for domestic water heating.

Symptom 7: Heat mode can't change to DHW mode immediately

POSSIBLE CAUSES	CORRECTIVE ACTION
Volume of tank is too small and the location of water temperature probe not high enough	 Set "dT1S5" to maximum valve, and set "t_DHWHP_RESTRICT" to minimum valve. Set dT1SH to 2°C. Enable TBH, and TBH should be controlled by the outdoor unit. If AHS is available, turn on first, if requirement for turn heat pump on is fullfilled, the heat pump will turn on. If both TBH and AHS are not available, try to change the postion of T5 probe(refer to 2 "General introduction").

Symptom 8: DHW mode can't change to Heat mode immediately

POSSIBLE CAUSES	CORRECTIVE ACTION
Heat exchanger for space heating not big enough	 Set "t_DHWHP_MAX" to minimum valve, the suggested valve is 60min. If circulating pump out of unit is not controlled by unit, try to connect it to the unit. Add 3-way valve at the inlet of fan coil to ensure enough water flow.
Space heating load is small	Normal , no need for heating
Disinfect function is enabled but without TBH	Disable disinfect function Add TBH or AHS for DHW mode
Manual turn on the FAST WATER function, after the hot water meets the requirements, the heat pump fails to switch to the air-conditioning mode in time when the air conditioner is in demand	Manual turn off the FAST WATER function
When the ambient temperature is low, the hot water is not enough and the AHS is not operated or operated late	 Set "T4DHWMIN", the suggested valve is ≥ -5°C Set "T4_TBH_ON", the suggested valve is ≥ 5°C
DHW mode priority	If there is AHS or IBH connect to the unit, when the outdoor unit failed, the hydraulic module board must run DHW mode till the water temperature reach the setting temperature before change to heating mode.

Symptom 9: DHW mode heat pump stop work but setpoint not reached, space heating require heat but unit stay in DHW mode

POSSIBLE CAUSES	CORRECTIVE ACTION
Surface of coil in the tank not large enough	The same solution for Symptom 7
TBH or AHS not available	 Check whether IBH(AHS or TBH) is set valid in "FOR SERVICEMAN" or whether IBH is set valid by DIP switch on the main control board of hydraulic module. Check whether IBH(AHS or TBH) is damaged.

14.3 Error codes

A series of error codes and corresponding meaning can be found in the table below.

Reset the unit by turning the unit ON or OFF.

If Resetting the unit is invalid, contact your local dealer.

UPPER UNIT DISPLAY No.	ERROR CODE	MALFUNCTION OR PROTECTION
1	E0	Water flow malfunction(after 3 times E8)
3	E2	Communication malfunction between controller and hydraulic module
4	E3	Total outlet water temp.sensor(T1) malfunction
5	EY	Water tank temp.sensor (T5) malfunction
8	Ε7	Buffer tank upper temp.sensor(Tbt) malfunction
9	E8	Water flow malfunction
12	Еь	Solar temp.sensor(Tsolar) malfunction
14	Ed	Inlet water temp.sensor (Tw_in) malfunction
15	EE	Hydraulic module EEprom malfunction
39	HO	Communication malfunction between main control board and hydraulic module board
41	H2	Liquid refrigerant temp.sensor(T2) malfunction
42	H3	Gas refrigerant temp.sensor(T2B) malfunction
44	H5	Room temp.sensor(Ta) malfunction
48	H9	Outlet water for zone 2 temp.sensor (Tw2) malfunction
49	HR	Outlet water temp.sensor (Tw_out) malfunction
50	ΗЬ	Three times PP protection and Tw_out below 7 °C
52	Hd	Communication malfunction between master unit and slave unit
25	P5	Tw_out-Tw_in value too big protection
31	Pb	Anti-freeze mode

UPPER UNIT DISPLAY No.	ERROR CODE	MALFUNCTION OR PROTECTION
38	pp	Tw_out-Tw_in abnormal protection
2	ΕI	Phase loss or neutral wire and live wire are connected reversely
6	<i>E</i> 5	Air side heat exchanger temperature sensor (T3)malfunction
7	<i>E</i> 6	The mbient temperature sensor (T4)malfunction
10	E9	Suction temperature sensor(Th) malfunction
11	ER	Discharge temperature sensor(Tp) malfunction
40	НІ	Communication malfunction between main control board and inverter board
43	НЧ	Three times L0 protection
45	Н5	The DC fan malfunction
46	H7	Voltage protection
47	Н8	Pressure sensor malfunction
54	HF	Inverter module board EE prom malfunction
55	HH	10 times H6 in 2 hours
57	HP	Low pressure protection in cooling mode
20	PO	Low pressure switch protection
21	PI	High pressure switch protection
23	P3	Compressor overcurrent protection.
24	PY	Comp discharge temp. too high protection

UPPER UNIT DISPLAY No.		MALFUNCTION OR PROTECTION	
33	Pd	High temperature protection of air side heat exchanger temperature(T3).	
65	רם	High temperature protection of inverter module	
116	FI	DC bus low voltage protection	
134	LO	Inverter or compressor protection	
135	LI	DC bus low voltage protection.	
136	L2	DC bus high voltage protection	
137	L3	Current sampling error of PFC circuit	
138	LY	Rotating stall protection	
139	LS	Zero speed protection	
141	L7	Phase loss protection of compressor	
121	F5	EXV1 fault	
106	ЬЯ	T4 sensor out of operation range.	

⚠ CAUTION

In winter, if the unit has E0 and Hb malfunction and the unit is not repaired in time, the water pump and pipeline system may be damaged by freezing, so E0 and Hb malfunction must be repaired in time.

15 TECHNICAL SPECIFICATIONS

15.1 General

	1-phase	1-phase	3-phase	
Model	5/7/9 kW 12/14/16 kW		12/14/16 kW	
Nominal capacity	Refer to the Technical Data			
Dimensions HxWxD	865 × 1 040 × 410 mm 865 × 1 040 × 410 mm 865 × 1 040 × 410 mm			
Packing Dimensions HxWxD	970 × 1 190 × 560 mm	970 × 1 190 × 560 mm	970 × 1 190 × 560 mm	
Weight				
Net weight	87 kg	106 kg	120 kg	
Connections				
Water inlet/outlet	G1"BSP	G1 1/4"BSP	G1 1/4"BSP	
Water drain		Hose nipple		
Expansion vessel				
Volume		8 L		
Maximum working pressure (MWP)	8 bar			
Pump				
Туре	Water cooled	Water cooled		
No. of speed	Variable speed	Variable speed	Variable speed	
Pressure relief valve water loop	3 bar			
Operation range - water side				
Heating	+15 °C to +65 °C			
Cooling	+5 °C to +25 °C			
Domestic hot water by heat pump	+15°C to +60 °C			
Operation range - air side				
Heating	-25 °C to +35 °C			
Cooling	-5 °C to +43 °C			
Domestic hot water by heat pump	-25 °C to +43 °C			

15.2 Electrical specifications

Model		1-phase 5/7/9/12/14/16 kW	3-phase 12/14/16 kW
Standard unit	Power Supply	220-240 V~ 50 Hz	380-415 V 3N~ 50 Hz
Standard unit	Nominal Running Current	See "9.7.4 Safety device requirement"	

16 INFORMATION SERVICING

1) Checks to the area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minmised. For repair to the refrigerating system, the following precautions shall be complied with prior to conducting work on the system.

2) Work procedure

Works shall be undertaken under a controlled procedure so as to minimise the risk of a flammable gas or vapour being present while the work is being performed.

3) General work area

All mintenance staff and others working in the local area shall be instructed on the nature of work being carried out. work in confined sapces shall be avoided. The area around the work space shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

4) Checking for presence of refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. no sparking, adequately sealed or intrinsically safe.

5) Presence of fire extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry power or CO₂ fire extinguisher adjacent to the charging area.

6) No ignition sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. NO SMOKING signs shall be displayed.

7) Ventilated area

Ensure that the area is in the open or that it it adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

8) Checks to the refrigeration equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer s maintenance and service guidelines shall be followed. If in doubt consult the manufacturer s technical department for assistance. The following checks shall be applied to installations using flammable refrigerants.

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
- The ventilation machinery and outlets are operating adequately and are not obstructed.
- If an indirect refrigerating circuit is being used, the secondary circuits shall be checked for the presence of refrigerant; marking to the equipment continues to be visible and legible.
- Marking and signs that are illegible shall be corrected.
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

9) Checks to electrical devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, and adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- · That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.
- That there no live electrical components and wiring are exposed while charging, recovering or purging the system.
- That there is continuity of earth bonding.

10) Repairs to sealed components

- a) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- b) Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Instrinsically safe components do not have to be isolated prior to working on them.

11) Repair to intrinsically safe components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use. Intrinscially safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating. Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

12) Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

13) Detection of flammable refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

14) Leak detection methods

The following leak detection methods are deemed acceptable for systems containing flammable refrigerants. Electronic leak detectors shall be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25% maximum) is confirmed. Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work. If a leak is suspected, all naked flames shall be removed or extinguished. If a leakage of refrigernat is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated(by means of shut off valves) in a part of the system remote from the leak. Oxygen free nitrogen(OFN) shall then be purged through the system both before and during the brazing process.

15) Removal and evacuation

When breaking into the refrigerant circuit to make repairs of for any other purpose conventional procedures shall be used, However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- · Remove refrigerant;
- Purge the circuit with inert gas;
- Evacuate;
- Purge again with inert gas;
- Open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. The system shall be flushed with OFN to render the unit safe. This process may need to be repeated several times.

Compressed air or oxygen shall not be used for this task.

Flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system.

When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not closed to any ignition sources and there is ventilation available.

16) Charging procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be
 as short as possible to minimize the amount of refrigerant contained in them.
- · Cylinders shall be kept upright.
- · Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete(if not already).
- Extreme care shall be taken not to overfill the refrigeration system.
- Prior to recharging the system it shall be pressure tested with OFN. The system shall be leak tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

17) Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken.

In case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

- a) Become familiar with the equipment and its operation.
- b) Isolate system electrically
- c) Before attempting the procedure ensure that:
- Mechanical handling equipment is available, if required, for handling refrigerant cylinders.
- · All personal protetive equipment is available and being used correctly.
- The recovery process is supervised at all times by a competent person.
- Recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer s instructions.
- h) Do not overfill cylinders. (No more than 80% volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

18) Labelling

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

19) Recovery

When removing refrigerant from a system, either for service or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When tranferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct numbers of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant(i.e special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.

Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order.

Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to retruning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

20) Transportation, marking and storage for units

Transport of equipment containing flammable refrigerants Compliance with the transport regulations.

Marking of equipment using signs Compliance with local regulations.

Disposal of equipment using flammable refrigerants Compliance with national regulations.


Storage of equipment/appliances.

The storage of equipment should be in accordance with the manufacturer's instructions.

Storage of packed (unsold) equipment.

Storage package protection should be constructed such that mechanical damage to the equipment inside the package will not cause a leak of the refrigerant charge.


The maximum number of pieces of equipment permitted to be stored together will be determined by local regulations.

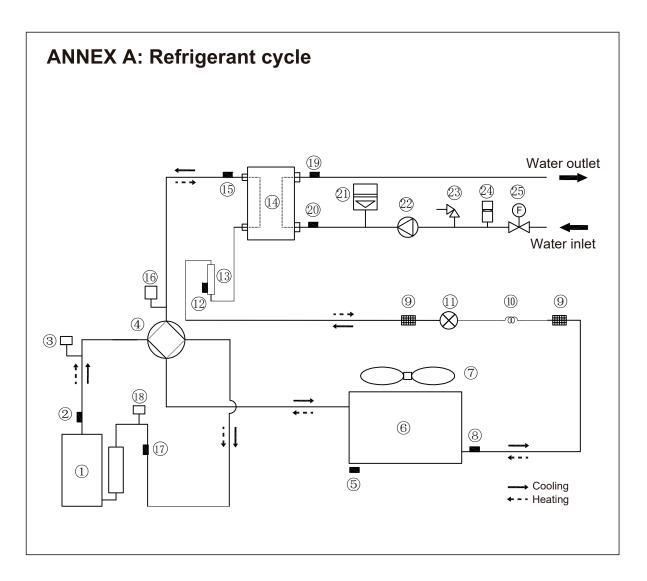

Item	Description	Item	Description
1	Compressor	14	Plate heat exchanger
2	Discharge temperature sensor	15	Gas refrigerant temperature sensor
3	High pressure switch	16	Pressure sensor
4	4-way valve	17	Suction temperature sensor
5	Ambient temperature sensor	18	Low pressure switch
6	Air side heat exchanger	19	Outlet water temperature sensor
7	DC_FAN	20	Inlet water temperature sensor
8	Air side heat exchanger temperature sensor	21	Expansion vessel
9	Strainer	22	Water pump
10	Capillary	23	Pressure relief valve
11	Electronic expansion valve	24	Automatic air purge valve
12	Liquid refrigerant temperature sensor	25	Water flow switch
13	Accumulator cylinder		

ANNEX B: To install the E-heating tape at the drainage outlet (by client)

Connect the heating tape wire at the drainage outlet to the wire joint XT3.

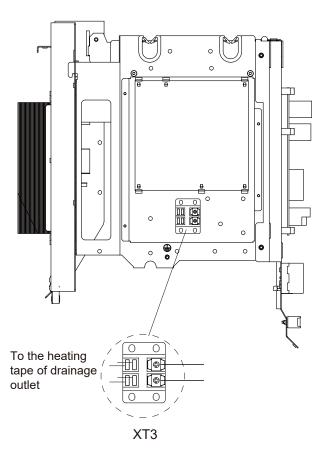

The picture is for reference only, please refer to the actual product. The power of the E-heating tape shall not exceed 40 W / 200 mA, supply voltage 230 V AC.

NOTE



Different languages

此页不做菲林, 仅核对使用

印刷技术要求

材质	封面封底120克双胶纸,双胶纸内页80g
规格	210*297(双面)
颜色	黑白
其他	胶装

设计更改记录表(仅做说明用,不做菲林)

版本升级	更改人	更改日期	更改主要内容	涉及更改页面 (印刷页码)
C-D	赵浩伟	2022. 1. 19	内容勘误	第12、14、15、16、 17、41、44、51页、 封底页
D-E	吴臻茂	2022-12-12	见附件修改表	1. 见附件修改表 2. 封面封底改成 120克双胶纸
E>F	陈厚生	2023-09-16	上位机端子 接线说明勘误: A+、B−调换位置	P44
F-G	覃俊	2024–11–08	见附件修改表	见附件修改表